



Service Manual

Models: GPC10AN-K5NNA1A
GPC12AN-K5NNA1A
GPH12AN-K5NNA1A
(Refrigerant R290)

GREE ELECTRIC APPLIANCES, INC. OF ZHUHAI

A decorative background graphic in the bottom right corner, featuring a blue and teal geometric design with a photograph of industrial machinery (pipes and valves) overlaid on it.

Table of Contents

Part I : Technical Information	16
1. Summary	16
2. Specifications	17
3. Outline Dimension Diagram	21
4. Refrigerant System Diagram	22
5. Electrical Part	23
5.1 Wiring Diagram	23
5.2 PCB Printed Diagram	25
6. Function and Control	27
6.1 Introduction of control panel	27
6.2 Remote Controller Introduction	29
6.3 Introduction of Basic Mode Function	33
Part II : Installation and Maintenance	35
7. Notes Maintenance Safety Precautions:	35
8. Installation Precaution	41
9. Install	43
9.1 Install Power cord Hooks	43
9.2 Removing Collected Water	43
10. Maintenance	53
10.1 Error Code	53
10.2 Malfunction Detection Flowchart	55
10.3 Maintenance Method for Common Malfunction	59
11. Exploded View and Parts List	61
12. Removal Procedure	67
Appendix:	77
Appendix 1: Reference Sheet of Celsius and Fahrenheit	77
Appendix 2: List of Resistance for Temperature Sensor	78

Notices

General Safety Instructions


Please pay careful attention to these safety instructions, to avoid risks to people and property. Before starting work on maintenance read this manual thoroughly and pay particular attention to the relevant chapters.

Regardless of further requirements of the country, in which the equipment will be installed: assembly, first start up, technical service, maintenance and repair and as well as dismantling and disposal have to be carried out by authorised personnel only.

During every operation strictly follow the instructions within this manual. Pay attention to the specific rules of air conditioning, electrics and refrigerant handling of the country within which the equipment is installed.

Key sections and/or sentences are highlighted with specific icons and symbols to the right side of the page. Please pay particular attention to this information.

The Symbols Used in this Manual are as Follows

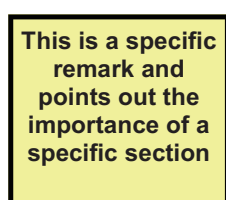

Information window highlighting important content of the specific section or additional information to consider.




This sign will indicate that you are handling a flammable substance and the surrounding environment can possibly contain it.



This is a general warning sign.




The Label is used to indicate that the flammable refrigerant is present within the application and service equipment.

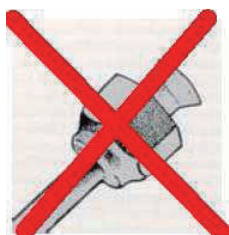

Images that indicate something what you should strictly avoid.



Specific bans!

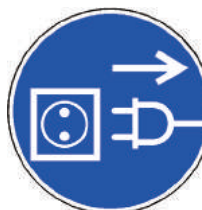

Specific commandments!



Instructions for first aid!



Fire protection!



Carefully read the instructions!

Working on components with safety-relevant functions jeopardise the safe operation of the installation. In case it is necessary to replace components, only use approved parts from GREE Electric, the Original Equipment Manufacturer(OEM) or Gree released or authorised components. The system contains the refrigerant R-290 (propane). This condition requires special safety precautions to be observed. While working on the system, the presence of any kind of ignition sources (e.g. sparks, open flames, hot surfaces, static electricity) are strictly prohibited. At the installation site, no matter what kind of activities are executed, smoking is strictly prohibited!

Likewise, ensure the installation site is well ventilated. For further details as far as it concerns the handling of the refrigerant R-290 (propane) .

Do not charge the system with any refrigerant which is not R-290! Do not mix any refrigerants! Before filling the system, ensure that there is no air (or other non-condensable gases such as nitrogen) left in the system, otherwise there is severe danger of damage to the system caused by excessive high pressure.

After charging the system with refrigerant, carefully examine and confirm the tightness by the use of an appropriate electronic leak detector!

ONLY original GREE (OEM) spare-parts are permitted for Service and Repair!



Proceed according the manuals Instructions!



Pay attention to the room size for indoor unit installation!

For specific information refer page XXX of this manual.

Get your Best Practices knowledge and skills update for HC refrigerants and be certificated for these jobs!

The Symbols Used in this Manual are as Follows

Electric operations (installation, repair, modification, maintenance, adjustment) have to be fulfilled by trained and authorised personnel only. When dealing with electrical issues, the specific rules of the country within which the equipment is installed must be followed, in addition to the instructions within this manual.

When working on the equipment or parts of it, the system has to be deenergised (by master switch, circuit breaker or separate cut-out) and made safe against restart of the system. Do not reconnect the system to the electric circuit until all work is done and all connections are tested. If handled unsafely or unprofessionally, severe electric shocks can occur. Consider the wiring diagram and follow the instructions of this manual very carefully whilst working on electrical parts. Wrong connections or incorrect grounding may lead to severe injuries and mortal danger.

Ground the system according to the particular requirements of the country within which the equipment is installed.

Connect all the wires properly and durably. Loose cables may lead to overheating or fire

Minimum Room Size

HC R290 is a flammable refrigerant and can form explosive mixtures in low concentrations. To minimise the risk of fire or explosion, the system must be installed in a room with a minimum floor area.

Unless there are further requirements, standards and legislation of the country within which the equipment is installed may apply. Any technicians that works on GREE hydrocarbon air- conditioners must be competent in the safe handling of flammable refrigerants, in addition to being in possession of knowledge and skills to maintain best refrigeration installation and servicing practices.

There are already training activities in place for engineers, technicians and sales staff to provide professional knowledge and skills for the handling of HC refrigerants and refrigeration systems operating with HCs.

Get trained and have your “HC Refrigeration Professional” certification!



Basics in RAC

Knowledge of the basic SI standard units for temperature, pressure, mass, density, energy.

Understanding of the basic theory of refrigeration systems including the functions of the main components in the system (compressor, evaporator, condenser, thermostatic expansion valves).

Understanding how to read a refrigerant flow chart and an electrical circuit diagram.

The determination of non condensable gases in the refrigeration system and how to eliminate them.

The importance of the use of oxygen free dry nitrogen (OFDN) for system flushing, leak test and strength test.

The elimination of humidity from the refrigeration system and how to recover or vent HC refrigerant from a system.

Usage of tables and diagrams (log p/h diagram, saturation tables of a refrigerant, diagram of a single compression refrigeration cycle) and interpretation of these tables and diagrams.

Knowledge of the basic operation of the following components in a refrigeration system and their role and importance for refrigerant leakage prevention and identification:

- Temperature and pressure controls
- Sight glass and moisture indicators
- Defrost controls, reverse cycle operation
- System protectors
- Measuring devices such as the pressure gauge manifold
- Thermometer
- Leak detector
- Refrigerant charging devices
- Vacuum pump
- Oxygen free dry nitrogen cylinder and pressure regulator

Fault finding – analysis and repair.

- Knowledge of flammable refrigerants
- Risk analysis for the application of flammable refrigerant and properties of flammable refrigerants
- Electrical circuit assessment and repair

Read More!
**SAFETY CODE
 OF PRACTICE
 FOR REFRIGE-
 RATING SYS-
 TEMS
 UTILISING A2 &
 A3 REFRIGE-
 RANTS**

ISBN
 1 872719 15 5

Checks before putting in operation, after a long period of nonuse, after maintenance or repair intervention or during operation.

Carry out a pressure and leak test to check the strength and the tightness of the system.

Usage of a vacuum pump.

Evacuation of the system to remove air and moisture according to standard practice.



Checks for Leakage

Knowledge of potential leakage points of refrigeration, air-conditioning and heat pump equipment. Making a visual and manual inspection of the whole system.

Carry out a check for leakage of the system using an indirect method and/or one of the direct methods.

Direct leak detection methods:

1. Fixed leakage detection systems
2. Portable electronic gas detectors
3. Ultraviolet (UV) indication fluids
4. Weak soapy water solution (bubble test) also in combination with OFDN
5. New installation tightness test for leakage detection procedure e.g. H2/N2
6. Operational system tightness test for leakage detection procedure

Indirect refrigerant detection methods:

1. Visual
2. Manual checks

Use of portable measuring devices such as pressure gauges, thermometers and multi-meters for measuring Volt/Amp/Ohm in the context of indirect methods for leakage checking and interpretation of the measured parameters. It is very important to make use of an electronic gas detection device. Take care that the electronic gas detector is designed and certificated for the use with flammable refrigerants. Additionally, the electronic HC gas detector must be part of the Personnel Protective Equipment (PPE) of the technician because if this device is operational in the work area it will warn by detection and signalling if HC refrigerant is in the atmosphere.

The use of OFDN is important and the HC gas detector is indeed a personnel protection device (PPE)!

Handling of the refrigerant during installation, maintenance, servicing or recovery or venting

Usage of scales to weigh refrigerant. Knowledge of requirements and procedures for handling, storage and transportation especially of flammable refrigerants and especially of contaminated refrigerant and of oils. Safe HC refrigerant recovery and venting.

Installation, commissioning and maintenance of a compressor

The basic functioning of a compressor (including capacity control and lubricating system) and risks of refrigerant leakage to its operation. Installing a compressor properly, including control and safety equipment. Adjusting the safety and control switches. Checking the oil return system. Start up and shut down a compressor and checking the good working conditions of the compressor, including by making measurements during operation of compressor.

Installation, commissioning and maintenance of condensers

The basic functioning of a condenser. Installing a condenser properly, including control and safety equipment. Adjusting the safety and control switches. Checking the hot-gas and liquid lines in correct positions. Start up and shut down a condenser and check the good working conditions, including by making measurements during operation. Checking the surface of the condenser. Methods for condenser surface cleaning and fins adjustments.



Installation, commissioning and maintenance of evaporators

The basic functioning of an evaporator (including defrosting system). Installation of an evaporator including control and safety equipment. Adjusting the safety and control switches. Checking the liquid and suction pipelines in the correct position and checking the hot gas defrost pipeline. Start up and shut down an evaporator and check the good working of the evaporator, including by making measurements during operation. Functional checking of the reverse cycling control device. Checking the surface of the evaporator. Methods for evaporator surface cleaning and fins adjustments.

Preventive maintenance will improve the system efficiency

Piping

Professional brazing is another key component for safe and state of the art HC system installation and servicing. Brazing leak free joints on metallic tubes and pipes that can be used in refrigeration, air-conditioning or heat pump systems. Make/check pipe and component supports and vibration elimination. Knowledge about the designing and dimensioning of the different refrigeration system section pipes including risers. The behaviour of lubricants within the refrigeration system and the influences of the dimensioning of pipe work in relation to lubricants. Develop strategies to minimise mechanical connections like flaring or flanges and to provide a sealed (hermetic) system.

Regular professional brazing experience is an important pre-condition for the work with hydrocarbon refrigerants!

HC R290 Refrigerant Issues

Please notice that the unit is filled with propane. Details to this refrigerant are found in chapter “refrigerant”. Propane is highly flammable and leads to explosion under certain conditions. Inappropriate treatment of the unit involves the risk of severe damages of people and material.

Basics

HC R-290 (propane) is an odourless and colourless gas of the group of hydrocarbons.

HC R-290 is heavier than air and at high concentrations can cause narcotic effects and eventually asphyxiation.

R-290 is highly flammable within the range of 2,1% and 9,5% by volume, or 38 g/m³ to 170 g/m³ in air. The auto-ignition temperature is about 470°C.

Since R-290 is an odourless and colourless gas, it is difficult to perceive that it is present (as with most other refrigerants).


Propane is often used as a fuel such as for heating or barbecues. However, for use on refrigeration systems, fuel-grade propane is not suitable since it contains high levels of impurities, which would damage the refrigeration system and may not provide the desired refrigerating capacity or efficiency.



HC R-290 refrigerant has a high grade of purity.

Propane as a cooking gas is not useful for refrigeration purpose!

The structural formula of HC R-290 (propane)

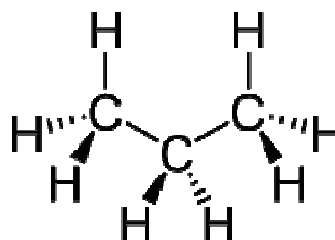

Important Refrigerant Properties and Parameters:

Molecular formula	C ₃ H ₈
Melting point [°C]	-188
Boiling point under atmospheric pressure [°C]	-42
Molar mass [g mol ⁻¹]	44,10
Critical temperature [°C]	96,8
Critical pressure [bar]	42
Practical limit [g/m ³]	8
Lower flammability level LFL [g/m ³]	38
Lower flammability level LFL [%]	2,1
Upper flammability level UFL [g/m ³]	171
Upper flammability level UFL [%]	9,5
Ignition temperature [°C]	470

Read More!

Guidelines for the safe use of hydrocarbon refrigerants

GIZ—PROKLIMA


<http://www.gtz.de/proklima>

Flammability

Three components are needed simultaneously for causing fire:

1. Oxygen
2. Ignition source
3. The flammable concentration of HC

For ignition, the concentration of HC in air has to be between the lower and upper flammable limits. If the concentration is below the lower flammability limit (LFL) of about 2% by volume in air, there is not enough HC for combustion. If the concentration is above the upper flammability limit (UFL) of about 10% there is insufficient oxygen for combustion.

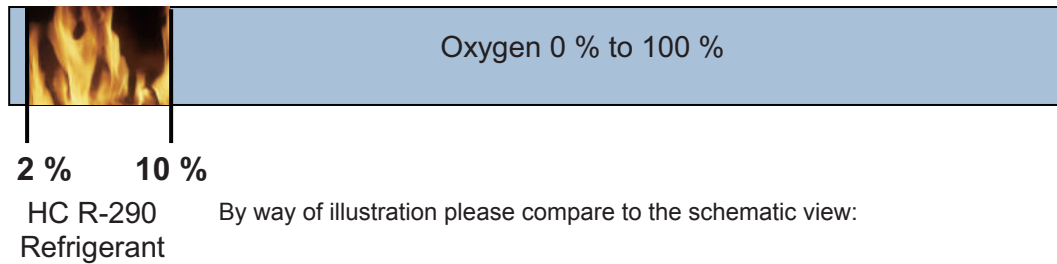

Possible ignition sources are:

1. A flame, for example from brazing torch, halide torch leak lamp, match or lighter, cigarette
2. A spark from an electrical component
3. Static electricity
4. Hot surfaces

Safety Data

Hazard Identification

- Extremely flammable (F+).
- Readily forms an explosive air-vapour mixture at ambient temperatures.
- Vapour is heavier than air and may travel to remote sources of ignition (e.g. along drainage systems, into basements etc).
- Liquid releases generate large volumes of flammable vapour (approx 250:1)
- Cold burns (frostbite) will result from skin / eye contact with liquid.
- Liquid release or vapour pressure jets present a risk of serious damage to the eyes.
- Abuse involving inhalation of high concentrations of vapour, even for short periods, which can produce unconsciousness or may prove fatal. Inhalation may cause irritation to the nose and throat, headache, nausea, vomiting, dizziness and drowsiness. In poorly ventilated areas unconsciousness or asphyxiation may result.



To ignite HC R-290, three (3) components must exist at the same time at work area to cause the refrigerant burning!



1 kg of liquid HC R-290 refrigerant creates about 250 litres of gas

Beside the flammability, most other safety properties are similar to other refrigerants!

Rely always on best service practices in refrigeration!

First Aid Measures

Inhalation:


Remove the affected person to fresh air. If breathing has stopped, administer artificial respiration. Give external cardiac massage if necessary. If the person is breathing but unconscious, place them in the recovery position. Obtain medical assistance immediately.

Skin:

In case of cold burns: flush with water to normalize temperature. Cover the burns with sterile dressings Do not use ointments or powders. Obtain medical assistance immediately.

Eyes:

Cold burns should be flushed with water to normalise temperature, cover the eye with a sterile dressing and obtain medical assistance immediately.

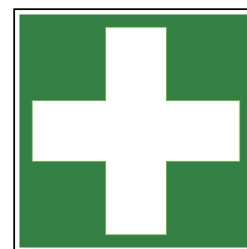

Fire Fighting Measures

HC R-290 is delivered, stored, and used at temperatures above their flash point. Avoid all naked flames, sparks, cigarettes etc.

- In case of fire, immediately alert fire brigade
- Ensure an escape path is always available from any fire
- If gas has ignited do not attempt to extinguish but stop gas flow and allow to burn out.
- Use water spray to cool heat-exposed containers, and to protect surrounding areas and personnel effecting the shut off
- Every precaution must be taken to keep containers cool to avoid the possibility of a boiling liquid expanding vapour explosion (BLEVE)

Extinguishing Media:

In case of a large fire:

Release must be stopped and container cooled by water spray.

Water mist should be used to assist approach to the source of the fire.

Large fires should only be handled by Fire Brigade.

DO NOT USE WATER JET

Small fire:

Use dry powder extinguisher



DO NOT USE WATER JET

Special protective equipment for fire fighters:

In confined spaces use self-contained breathing apparatus

Hazardous combustion products:

Incomplete combustion may form carbon monoxide.



Accidental Release Measures

Immediate emergency action:

- Clear people away from the area to a safe place
- Do not operate electrical equipment unless “Ex”-rated
- Summon the emergency services
- Treat or refer casualties if necessary

Further actions:

- Stop release
- Use dry powder or carbon dioxide extinguishers
- Cool containers exposed to fire by using water / mist spray.

Further action (when release is made safe):

- Extinguish all naked lights – avoid creating sparks
- Position fire fighting equipment
- Cover drains and disperse vapour with water spray.

Note: vapour may collect in confined spaces.

Accidental Release Measures

Due to the flammability of R-290 and the risk of fire or explosion during servicing, special safety rules must be followed during operation. In order to avoid damage for people and property, particular requirements are listed hereafter.

Before servicing the unit, the surrounding area where the work will be done must be clear of safety hazards to ensure safe working. Nevertheless it is required to carry out a risk assessment in order to minimise the risk of ignition of R-290.



The following safety measures must be followed:

1. Any employees and other present persons must be informed about the service and the way the service is done, first.
2. It is recommended to isolate the working environment in order to keep out any unauthorised personnel.
3. It is useful to set up signs such as „no smoking“ or „access denied“.
4. It is prohibited to store any combustible goods within the working environment.
5. Within two (2) metres radius, ignition sources are not allowed in the working area.
6. Fire extinguisher (dry powder) must be easily accessible at any time.
7. During service work, proper ventilation of the environment must be ensured.



Sign plate to protect and mark the working area.

Appropriate detectors, suitable for hydrocarbons, must be available and operational all the time. Appropriate tools and appliances must be available and ready for operation.

Any employees need to be instructed extensively about the safety measures and the possible safety hazard.

Refrigerant Recovery

Before starting service work on the refrigerant circuit, the existing refrigerant must be removed. When carrying out removal of the refrigerant, the following must be considered:

- The recovery cylinder must be permitted for the use of R-290 (especially regarding the pressure and the compatibility of the connectors and the valves).
- The recovery machine must be suitable for operation with R-290. Importantly, the recovery machine must not itself be an ignition source.
- The filling of the recovery cylinder should be monitored closely by controlling the weight. It is recommended to place and then to leave the cylinder on a digital scale. Pay attention to not overfilling the cylinder. The cylinder is only allowed to be filled up to 80% of its complete volume by liquid refrigerant.
- The pressure must be controlled in order to ensure that the permissible pressure of the cylinder is not exceeded at any time.
- After filling, the cylinder must be marked with the mass and the type of refrigerant recovered.
- The recovery machine should be operated until the pressure reduces to 0,3 bar absolute pressure. R-290 is soluble to oil. This may lead to a rise of pressure because the refrigerant vaporises from oil. It may be necessary to operate the recovery machine for a second or even a third time.
- Small amounts of R-290 can be vented in safe manner to the environment.
- Remaining amounts of HC absorbed by the oil can be extracted from the system using a vacuum pump in combination with an exhaust vent hose.
- A second "two way excess" recovery cylinder can be used in serial connection to act as an oil-separator.
- After the systems' pump out, the system should be flushed with oxygenfree dry nitrogen (OFDN) in order to ensure no flammable gas are inside the system.



Repair of Leaks

System leaks must be immediately repaired by authorised personnel after becoming acquainted. If they cannot be repaired immediately, the refrigerant charge should be removed from the system until the point at which the leak can be properly repaired.

- Removing the refrigerant from the system in order to avoid an uncontrolled discharge.
- Examine the leak source, determining the reason for the leak and carry out the proper course of action
- Repair properly (NO „temporary repairing“)
- Based on the results of the systems' examination, suitable measures need to be identified in order to avoid a recurrent appearance of the leak.
- Before embarking on the repair, ensure that the refrigerant has been removed and the system flushed with OFDN, especially if brazing is to take place
- After each intervention into a refrigeration system (repairing leaks, replacing components, brazing) the system must be subject to a leak test and following strength test of the system.



Regular professional brazing experience is an important precondition for the work with hydrocarbon refrigerants!

The use OFDN is an important precondition for professional leak repair!

1. System flushing from HC
2. Inert gas brazing
3. Leak testing
4. Strength testing
5. Cleaning (blowing) agent

Gas Detection

While servicing the unit it is recommended for the whole period of work — before, during and after — to monitor the gas concentration in the air within the work environment. By monitoring the air within the work environment the danger of a possible formation of flammable atmosphere can be detected early.

The HC leak detector is indeed a PPE device!

Doing the monitoring, ensure that the gas detectors are suitable for hydrocarbon detection. Never use open fire or a device with an ignition source for the detection of gas or for leak detection.

Before operation of the gas detector the instruction manual must be read carefully. In case of any questions refer to the detector manufacturer. Furthermore ensure the detector is correctly calibrated. Instructions for calibration can be found in the instruction manual of the detector or upon request from the manufacturer.

A possible re-calibration must be done within an area which is free of refrigerants.

In case of a positive detection by the detector any work must be stopped immediately. Any open flames or ignition sources must be extinguished or removed. In addition to a suitable and approved HC gas detectors, portable gas detectors can be used.

Such a detector can be clipped to clothing or placed on the floor within the working area. It should be switched on for the duration of the work, and set to alarm at 15% of the lower flammability level (LFL), to warn that flammable concentration may be nearby. In this way, technicians can be alerted whenever an inadvertent release of flammable refrigerant occurs, and can immediately act upon the relevant emergency procedures.



Portable HC Gas Detector

Cylinder Handling

R-290 is available in a large variety of different cylinders which are to be distinguished whether they are refillable or not. Most refillable cylinders are equipped with pressure relief valves, often with own special construction of valves in order to distinguish them from the cylinders of different refrigerants.

Often special legal requirements about the handling of flammable refrigerants exist in the different countries. These requirements must be studied and adhered to. Principally the following regulations in dealing with R-290 cylinders apply:

1. Do not remove or destroy official stickers of the cylinder
2. Close the cylinder with a cap any time the cylinder is not used
3. Never expose the cylinder to direct heat
4. Do not repair or modify the cylinder or the cylinders' connections
5. Only use suitable equipment for transportation of the cylinder, even for short distances. Never roll the cylinder across the ground.
6. Take appropriate measures in order to prevent impurities, water or oil from entering the cylinder.
7. Should it be necessary to warm the cylinder, only use warm water or air which temperature must not exceed 40 °C (104 °F). Open flames or radiant heaters are not allowed at any time.



8. Weigh the cylinder and compare it against the tare weight (normally stamped on the cylinder) in order to make sure that it is empty. Pressure control is no secure method to find out if and how much refrigerant there is inside the cylinder.
9. For accurate charging, use a set of reliable scales with appropriate resolution (depending on the size of system charged with refrigerant) and use the smallest size of cylinder available.
10. For recovery of R-290, only use cylinders which are allowed to be filled with R-290.
11. Make sure that safety inspections are still valid (i.e. within date), specifically with regards to safety test certification.
12. For refillable recovery cylinders keep in mind that with recovered amounts of HC refrigerant, oil will always be present specific amounts may remain in the cylinder after emptying.

Charging HC!

Always use the smallest cylinder possible and rely on appropriate accurate and sensitive scales

The storage of R-290 cylinders is controlled by regulations. These regulations take priority over the present guidelines. Typically, such rules imply the following:

1. Cylinders should be stored in a separate area, preferably outside, otherwise in a dry, well ventilated place far away from any ignition source.
2. Admission to storage area must only be given to authorised personnel only. Storage areas must be labelled with “no smoking” and “no naked flames” sign.
3. Storage areas should be at ground level and never in the basement.
4. Access should be easy – exclude any obstacles.
5. Cylinders should be stored and operated only in an upright position.
6. Choose appropriate measures to prevent static charges
7. Please remember that the maximum quantity of stored refrigerant sometimes might be regulated by national regulations.

Read More!

Guidlines for the safe use of hydro-carbon refrigerants


GIZ—PROKLIMA

<http://www.gtz.de/proklima>

The transport of cylinders is controlled by laws in most countries. These laws must always be regarded first before the mentioned guidelines here. In many cases information about regulations for the transport of cylinders could be given by the dealer of the refrigerant.

Basically the following must be regarded concerning the transport of R290 cylinders:

1. During the transportation of R290 always carry along printed information about the refrigerant. In case of emergency these information must be easy accessible. There are often different demands to the transporters carrying a great quantity of gas. Inform yourself before the scheduled transport.
2. Make yourself familiar with the risks of the refrigerant and the emergency measures in case of accident or emergency.
3. Always carry a fire extinguisher during transportation with you. It should be a dry powder fire extinguisher with a capacity at least of 2 kg. Make sure that the driver is experienced in fire extinguisher operation.
4. Cylinders must be transported in an upright position and be tightly secured.
5. Make sure of a proper ventilation inside the van even though it might request a change in the vans' body construction.
6. Place the security advise „flammable gas“ upon the rear side of the van.
7. Smoking or open fire is strictly forbidden inside the van.
8. Do not leave cylinders in a locked van without surveillance longer than necessary.

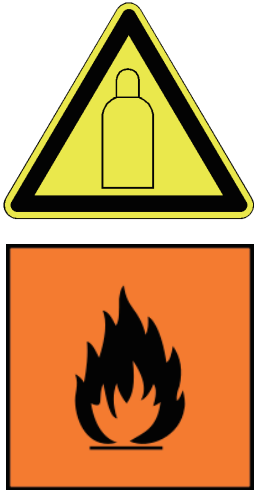

Pressure—Temperature Chart


HC Refrigerant R-290							
Temperature		Absolute pressure			Gauge pressure		
°C	°F	kPa	bar	PSI	kPa(g)	bar(g)	PSI(g)
-40	-40	111,12	1,11	16,12	11,12	0,11	1,61
-39	-38,2	116,00	1,16	16,83	16,00	0,16	2,32
-38	-36,4	121,05	1,21	17,56	21,05	0,21	3,05
-37	-34,6	126,27	1,26	18,31	26,27	0,26	3,81
-36	-32,8	131,66	1,32	19,10	31,66	0,32	4,59
-35	-31	137,23	1,37	19,90	37,23	0,37	5,40
-34	-29,2	142,97	1,43	20,74	42,97	0,43	6,23
-33	-27,4	148,90	1,49	21,60	48,90	0,49	7,09
-32	-25,6	155,02	1,55	22,48	55,02	0,55	7,98
-31	-23,8	161,33	1,61	23,40	61,33	0,61	8,89
-30	-22	167,83	1,68	24,34	67,83	0,68	9,84
-29	-20,2	174,54	1,75	25,31	74,54	0,75	10,81
-28	-18,4	181,44	1,81	26,32	81,44	0,81	11,81
-27	-16,6	188,56	1,89	27,35	88,56	0,89	12,84
-26	-14,8	195,89	1,96	28,41	95,89	0,96	13,91
-25	-13	203,43	2,03	29,51	103,43	1,03	15,00
-24	-11,2	211,19	2,11	30,63	111,19	1,11	16,13
-23	-9,4	219,18	2,19	31,79	119,18	1,19	17,29
-22	-7,6	227,39	2,27	32,98	127,39	1,27	18,48
-21	-5,8	235,84	2,36	34,21	135,84	1,36	19,70
-20	-4	244,52	2,45	35,46	144,52	1,45	20,96
-19	-2,2	253,44	2,53	36,76	153,44	1,53	22,26
-18	-0,4	262,61	2,63	38,09	162,61	1,63	23,58
-17	1,4	272,03	2,72	39,45	172,03	1,72	24,95
-16	3,2	281,70	2,82	40,86	181,70	1,82	26,35
-15	5	291,62	2,92	42,30	191,62	1,92	27,79
-14	6,8	301,81	3,02	43,78	201,81	2,02	29,27
-13	8,6	312,27	3,12	45,29	212,27	2,12	30,79
-12	10,4	323,00	3,23	46,85	223,00	2,23	32,34
-11	12,2	334,00	3,34	48,44	234,00	2,34	33,94
-10	14	345,28	3,45	50,08	245,28	2,45	35,58
-9	15,8	356,85	3,57	51,76	256,85	2,57	37,25
-8	17,6	368,70	3,69	53,48	268,70	2,69	38,97
-7	19,4	380,85	3,81	55,24	280,85	2,81	40,73
-6	21,2	393,29	3,93	57,04	293,29	2,93	42,54
-5	23	406,04	4,06	58,89	306,04	3,06	44,39
-4	24,8	419,09	4,19	60,78	319,09	3,19	46,28
-3	26,6	432,45	4,32	62,72	332,45	3,32	48,22
-2	28,4	446,13	4,46	64,71	346,13	3,46	50,20
-1	30,2	460,13	4,60	66,74	360,13	3,60	52,23
0	32	474,46	4,74	68,82	374,46	3,74	54,31
1	33,8	489,11	4,89	70,94	389,11	3,89	56,44
2	35,6	504,10	5,04	73,11	404,10	4,04	58,61
3	37,4	519,43	5,19	75,34	419,43	4,19	60,83
4	39,2	535,10	5,35	77,61	435,10	4,35	63,11
5	41	551,12	5,51	79,93	451,12	4,51	65,43
6	42,8	567,49	5,67	82,31	467,49	4,67	67,80
7	44,6	584,22	5,84	84,74	484,22	4,84	70,23
8	46,4	601,31	6,01	87,21	501,31	5,01	72,71
9	48,2	618,77	6,19	89,75	518,77	5,19	75,24
10	50	636,60	6,37	92,33	536,60	5,37	77,83

HC Refrigerant R-290							
Temperature		Absolute pressure			Gauge pressure		
11	51,8	654,81	6,55	94,97	554,81	5,55	80,47
12	53,6	673,40	6,73	97,67	573,40	5,73	83,17
13	55,4	692,38	6,92	100,42	592,38	5,92	85,92
14	57,2	711,75	7,12	103,23	611,75	6,12	88,73
15	59	731,51	7,32	106,10	631,51	6,32	91,59
16	60,8	751,68	7,52	109,02	651,68	6,52	94,52
17	62,6	772,25	7,72	112,01	672,25	6,72	97,50
18	64,4	793,24	7,93	115,05	693,24	6,93	100,55
19	66,2	814,64	8,15	118,16	714,64	7,15	103,65
20	68	836,46	8,36	121,32	736,46	7,36	106,82
21	69,8	858,71	8,59	124,55	758,71	7,59	110,04
22	71,6	881,39	8,81	127,84	781,39	7,81	113,33
23	73,4	904,51	9,05	131,19	804,51	8,05	116,69
24	75,2	928,07	9,28	134,61	828,07	8,28	120,10
25	77	952,07	9,52	138,09	852,07	8,52	123,58
26	78,8	976,53	9,77	141,64	876,53	8,77	127,13
27	80,6	1001,45	10,01	145,25	901,45	9,01	130,75
28	82,4	1026,83	10,27	148,93	926,83	9,27	134,43
29	84,2	1052,68	10,53	152,68	952,68	9,53	138,18
30	86	1079,00	10,79	156,50	979,00	9,79	141,99
31	87,8	1105,79	11,06	160,38	1005,79	10,06	145,88
32	89,6	1133,08	11,33	164,34	1033,08	10,33	149,84
33	91,4	1160,85	11,61	168,37	1060,85	10,61	153,87
34	93,2	1189,12	11,89	172,47	1089,12	10,89	157,97
35	95	1217,88	12,18	176,64	1117,88	11,18	162,14
36	96,8	1247,16	12,47	180,89	1147,16	11,47	166,38
37	98,6	1276,94	12,77	185,21	1176,94	11,77	170,70
38	100,4	1307,24	13,07	189,60	1207,24	12,07	175,10
39	102,2	1338,07	13,38	194,07	1238,07	12,38	179,57
40	104	1369,42	13,69	198,62	1269,42	12,69	184,12
41	105,8	1401,31	14,01	203,25	1301,31	13,01	188,74
42	107,6	1433,73	14,34	207,95	1333,73	13,34	193,44
43	109,4	1466,71	14,67	212,73	1366,71	13,67	198,23
44	111,2	1500,23	15,00	217,59	1400,23	14,00	203,09
45	113	1534,31	15,34	222,54	1434,31	14,34	208,03
46	114,8	1568,96	15,69	227,56	1468,96	14,69	213,06
47	116,6	1604,18	16,04	232,67	1504,18	15,04	218,17
48	118,4	1639,97	16,40	237,86	1539,97	15,40	223,36
49	120,2	1676,34	16,76	243,14	1576,34	15,76	228,63
50	122	1713,30	17,13	248,50	1613,30	16,13	233,99
51	123,8	1750,86	17,51	253,94	1650,86	16,51	239,44
52	125,6	1789,02	17,89	259,48	1689,02	16,89	244,98
53	127,4	1827,79	18,28	265,10	1727,79	17,28	250,60
54	129,2	1867,17	18,67	270,81	1767,17	17,67	256,31
55	131	1907,17	19,07	276,62	1807,17	18,07	262,11
56	132,8	1947,80	19,48	282,51	1847,80	18,48	268,01
57	134,6	1989,07	19,89	288,49	1889,07	18,89	273,99
58	136,4	2030,98	20,31	294,57	1930,98	19,31	280,07
59	138,2	2073,54	20,74	300,75	1973,54	19,74	286,24
60	140	2116,75	21,17	307,01	2016,75	20,17	292,51

Part I : Technical Information

1. Summary

GPC10AN-K5NNA1A
 GPC12AN-K5NNA1A
 GPH12AN-K5NNA1A

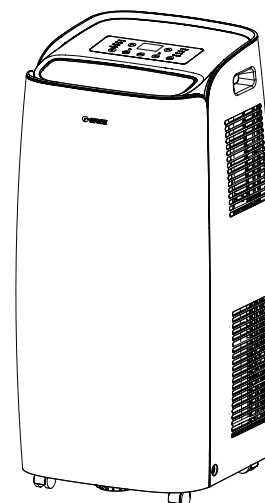

Remote Controller:

YV1F9(WiFi)



Models	Product Code	Remote Controller
GPC12AN-K5NNA1A	CK010032400/CK010032401	YV1F9(WiFi)
GPC10AN-K5NNA1A	CK010032300	
GPH12AN-K5NNA1A	CK010031300	

2. Specifications

Parameter		Unit	Value	
Model			GPC10AN-K5NNA1A	GPC12AN-K5NNA1A
Product Code			CK010032300	CK010032400
Power Supply	Rated Voltage	V ~	220-240	220-240
	Rated Frequency	Hz	50	50
	Phases		1	1
Cooling Capacity		W	2900	3500
Heating Capacity		W	/	/
Cooling Power Input		W	935	1345
Heating Power Input		W	/	/
Cooling Power Current		A	4.1	5.9
Heating Power Current		A	/	/
Rated Input		W	1100	1550
Rated Current		A	5.2	8.0
Air Flow Volume(H/M/L)		m ³ /h	380/330/280	380/330/280
Dehumidifying Volume		L/h	1.5	1.8
EER		W/W	3.1	2.6
COP		W/W	/	/
SEER			/	/
HSPF			/	/
Application Area		m ²	15-22	15-22
Climate Type			T1	T1
Isolation			I	I
Moisture Protection			IPX0	IPX0
Permissible Excessive Operating Pressure for the Discharge Side		MPa	3	3
Permissible Excessive Operating Pressure for the Suction Side		MPa	1.5	1.5
Throttling Method			Capillary	Capillary
Defrosting Method			/	/
Fuse current		A	3.15	3.15
Operation Temp		°C	16~30	16~30
Ambient Temp (Cooling)		°C	16~35	16~35
Ambient Temp (Heating)		°C	/	/
Sound Pressure Level (H/M/L)		dB (A)	53/51/49	53/51/49
Sound Power Level (H/M/L)		dB (A)	64/62/60	64/62/60
Dimension (WXHXD)		mm	405X835X385	405X835X385
Dimension of Carton Box (LXWXH)		mm	577X451X864	577X451X864
Dimension of Package (LXWXH)		mm	580X454X879	580X454X879
Net Weight		kg	35.5	35.5
Gross Weight		kg	41	41
Refrigerant			R290	R290
Refrigerant Charge		kg	0.3	0.28

Compressor	Compressor Manufacturer/Trademark		ZHUHAI LANDA COMPRESSOR CO., LTD	ZHUHAI LANDA COMPRESSOR CO., LTD
	Compressor Model		QXD-B172A030A	QXD-B222A030
	Compressor Oil		5GSD-TB or equivalent	5GSD-TB or equivalent
	Compressor Type		Rotary	Rotary
	L.R.A.	A	21.5	26
	Compressor RLA	A	3.4	4.5
	Compressor Power Input	W	770	1000
	Overload Protector		HPA-022	HPA-030
Evaporator	Fan Type		Centrifugal	Centrifugal
	Diameter Length(DXL)	mm	Φ204.6X72	Φ204.6X72
	Cooling Speed(H/M/L)	rpm	1000/860/730	1000/860/730
	Heating Speed(H/M/L)	W	1000/860/730	1000/860/730
	Fan Motor RLA	A	0.29	0.29
	Fan Motor Capacitor	μF	2.5	2.5
	Form		Aluminum Fin-copper Tube	Aluminum Fin-copper Tube
	Pipe Diameter	mm	Φ7	Φ7
	Row-fin Gap	mm	2-1.4	2-1.4
	Coil Length (LXDXW)	mm	591X25.4X228.6	591X25.4X228.6
	Swing Motor Model		/	/
	Output of Swing Motor	W	/	/
Condenser	Fan Type		Centrifugal	Centrifugal
	Fan Diameter	mm	Φ224.5X80	Φ224.5X80
	Form		Aluminum Fin-copper Tube	Aluminum Fin-copper Tube
	Pipe Diameter	mm	Φ5	Φ5
	Rows-fin Gap	mm	3-1.3 + 1-1.4	2-1.3 + 1-1.4
	Coil Length (LXDXW)	mm	592X34.2X304.8/475X11.4X266.7	576X22.8X304.8/ 475X11.4X266.7
	Fan Motor Speed	rpm	980/800	980/800
	Output of Fan Motor	W	50	50
	Fan Motor RLA	A	0.5	0.5
	Fan Motor Capacitor	μF	2.5	2.5

The above data is subject to change without notice. Please refer to the nameplate of the unit.


Parameter		Unit	Value	
Model			GPC12AN-K5NNA1A	GPH12AN-K5NNA1A
Product Code			CK010032401	CK010031300
Power Supply	Rated Voltage	V ~	220-240	220-240
	Rated Frequency	Hz	50	50
	Phases		1	1
Cooling Capacity		W	3500	3500
Heating Capacity		W	/	3500
Cooling Power Input		W	1345	1345
Heating Power Input		W	/	1130
Cooling Power Current		A	5.9	5.9
Heating Power Current		A	/	4.9
Rated Input		W	1550	1650
Rated Current		A	8.0	8.4
Air Flow Volume(H/M/L)		m ³ /h	380/330/280	380/330/280
Dehumidifying Volume		L/h	1.8	1.8
EER		W/W	2.6	2.6
COP		W/W	/	3.1
SEER			/	/
HSPF			/	/
Application Area		m ²	15-22	15-22
Climate Type			T1	T1
Isolation			I	I
Moisture Protection			IPX0	IPX0
Permissible Excessive Operating Pressure for the Discharge Side		MPa	3	3
Permissible Excessive Operating Pressure for the Suction Side		MPa	1.5	1.5
Throttling Method			Capillary	Capillary
Defrosting Method			/	/
Fuse current		A	3.15	3.15
Operation Temp		°C	16~30	16~30
Ambient Temp (Cooling)		°C	16~35	16~35
Ambient Temp (Heating)		°C	/	10~27
Sound Pressure Level (H/M/L)		dB (A)	53/51/49	53/51/49
Sound Power Level (H/M/L)		dB (A)	64/62/60	65/63/61
Dimension (WXHXD)		mm	405X835X385	405X835X385
Dimension of Carton Box (LXWXH)		mm	577X451X864	577X451X864
Dimension of Package (LXWXH)		mm	580X454X879	580X454X879
Net Weight		kg	35.5	36.0
Gross Weight		kg	41	41.5
Refrigerant			R290	R290
Refrigerant Charge		kg	0.28	0.3

Compressor	Compressor Manufacturer/Trademark		ZHUHAI LANDA COMPRESSOR CO., LTD	ZHUHAI LANDA COMPRESSOR CO., LTD
	Compressor Model		QXD-B222A030	QXD-B222A030
	Compressor Oil		5GSD-TB or equivalent	5GSD-TB or equivalent
	Compressor Type		Rotary	Rotary
	L.R.A.	A	26	26
	Compressor RLA	A	4.5	4.5
	Compressor Power Input	W	1000	1000
	Overload Protector		HPA-030	HPA-030
Evaporator	Fan Type		Centrifugal	Centrifugal
	Diameter Length(DXL)	mm	Φ204.6X72	Φ204.6X72
	Cooling Speed(H/M/L)	rpm	1000/860/730	1000/860/730
	Heating Speed(H/M/L)	W	/	1000/860/730
	Fan Motor RLA	A	0.29	0.29
	Fan Motor Capacitor	μF	2.5	2.5
	Form		Aluminum Fin-copper Tube	Aluminum Fin-copper Tube
	Pipe Diameter	mm	Φ7	Φ7
	Row-fin Gap	mm	2-1.4	3-1.4
	Coil Length (LXDXW)	mm	591X25.4X228.6	520X38.1X228.6
	Swing Motor Model		/	/
	Output of Swing Motor	W	/	/
Condenser	Fan Type		Centrifugal	Centrifugal
	Fan Diameter	mm	Φ224.5X80	Φ224.5X80
	Form		Aluminum Fin-copper Tube	Aluminum Fin-copper Tube
	Pipe Diameter	mm	Φ5	Φ5
	Rows-fin Gap	mm	2-1.3 + 1-1.4	2-1.3 + 1-1.4
	Coil Length (LXDXW)	mm	576X22.8X304.8+475X11.4X266.7	576X22.8X304.8+475X11.4X266.7
	Fan Motor Speed	rpm	980/800	980/800
	Output of Fan Motor	W	50	50
	Fan Motor RLA	A	0.5	0.5
	Fan Motor Capacitor	μF	2.5	2.5


The above data is subject to change without notice. Please refer to the nameplate of the unit.

4. Refrigerant System Diagram

Cooling Only Model

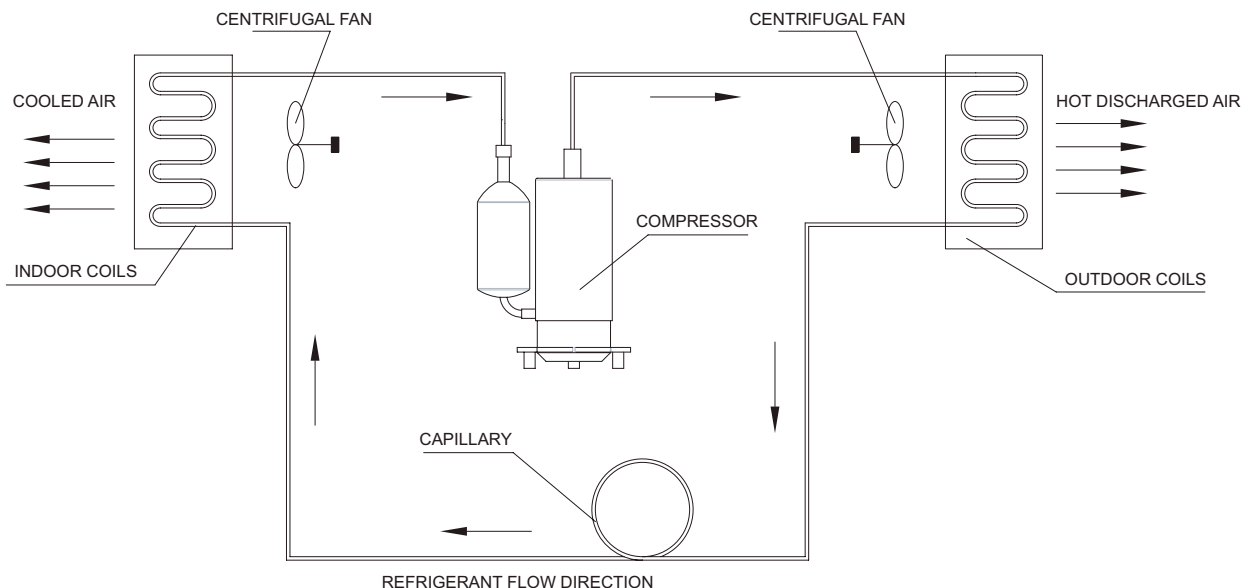

Cooling & Heating Model

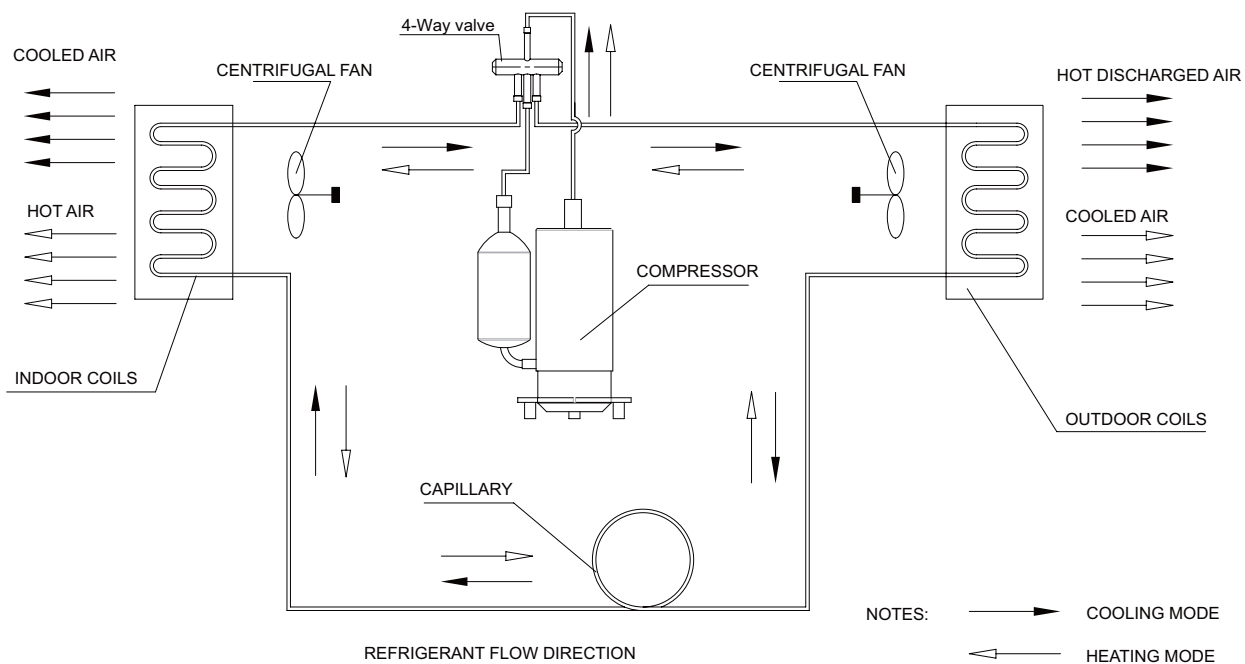

5. Electrical Part


5.1 Wiring Diagram

●Instruction

Symbol	Symbol Color	Symbol	Symbol Color	Symbol	Name
WH	White	GN	Green	COMP	Compressor
YE	Yellow	BN	Brown	⊕	Grounding wire
RD	Red	BU	Blue	/	/
YEGN	Yellow/Green	BK	Black	/	/
VT	Violet	OG	Orange	/	/


●Electric Diagram

GPC10AN-K5NNA1A
 GPC12AN-K5NNA1A(CK010032400/CK010032401)

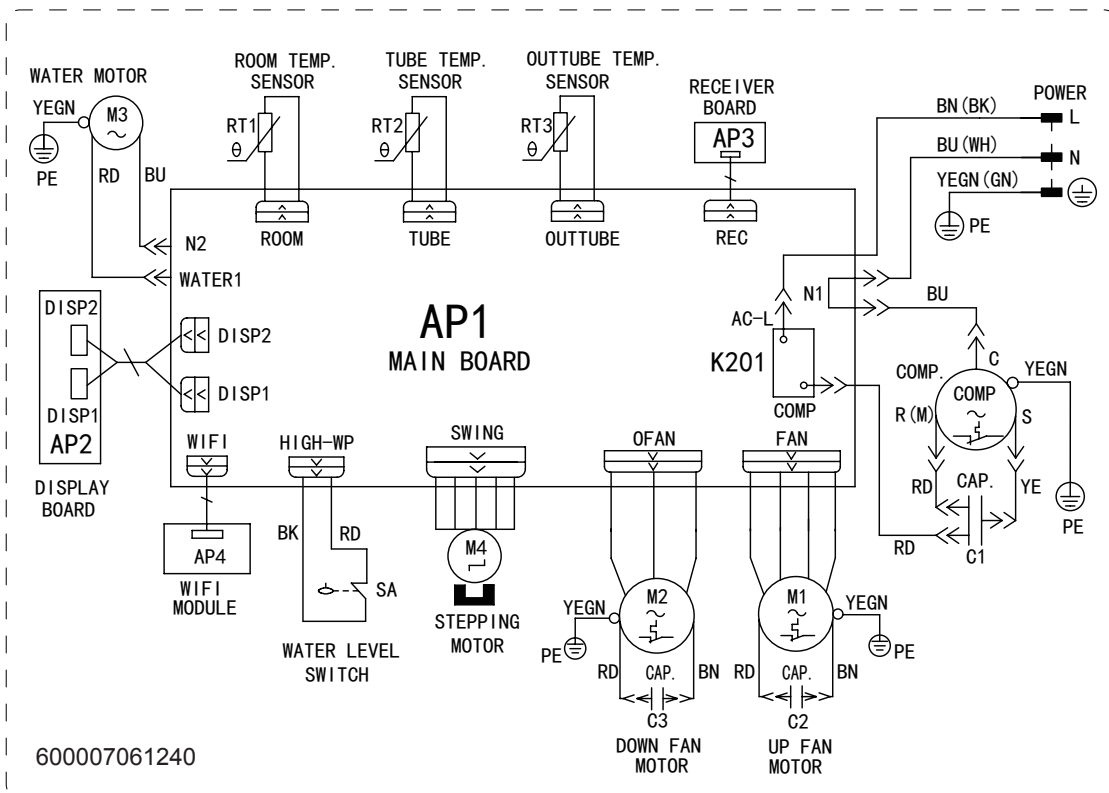

6. Function and Control

6.1 Introduction of control panel

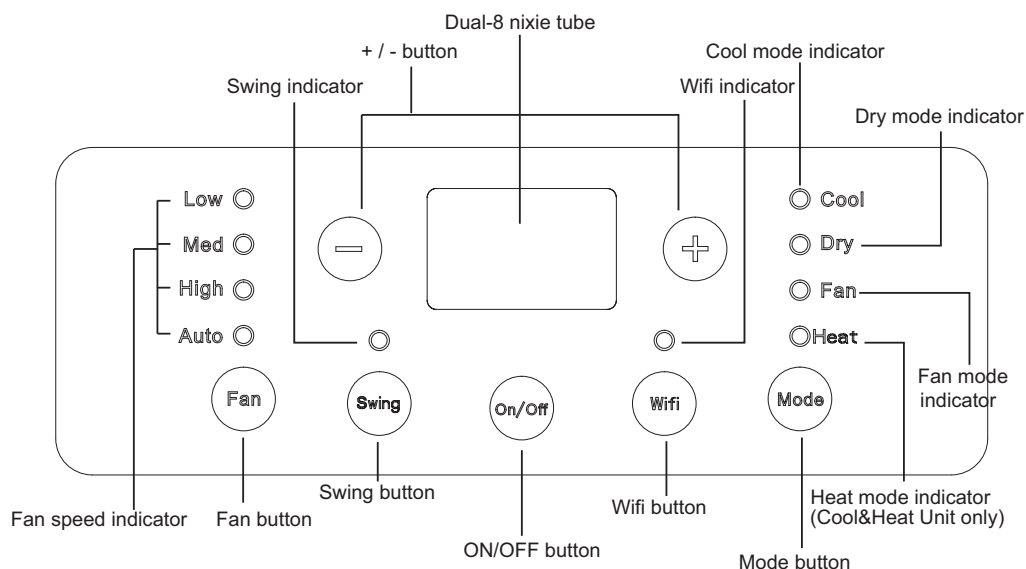

Operation of control panel

Note:

- After putting through the power, the air conditioner will give out a sound. After that, you can operate the air conditioner by the control panel.
 - Under ON status, after each pressing of the button on control panel, the air conditioner will give out a sound. Meanwhile, corresponding indicator on control panel will be bright.
 - Under OFF status, dual-8 nixie tube on control panel won't display.
- Under ON status, dual-8 nixie tube on control panel will display set temperature under cooling mode and Heating mode (Cool&Heat Unit only), while it won't display under other modes.

1.ON/OFF button


Pressing this button can turn on or turn off the air conditioner.

2. + / - button

Under cooling or heating mode, press "+" or "-" button to increase or decrease set temperature by 1°C(2°F). Set temperature range is 16°C~30°C Under auto, dry or fan mode, this button is invalid.

3. Mode button

Press this button and the mode will circulate according to below sequence:



Cool: Under this mode, cooling mode indicator is bright. Dual-8 nixie tube displays set temperature. Temperature setting range is 16°C~30°C


Dry: Under this mode, drying mode indicator is bright. Dual-8 nixie tube won't display.

Fan: Under this mode, the air conditioner only blow fan. Fan indicator is bright. Dual-8 nixie tube won't display.

Heat Cool&Heat Unit only : Under this mode, heating mode indicator is bright. Dual-8 nixie tube displays set temperature. Temperature setting range is 16°C~30°C.

4.Fan button

Press this button and the fan speed will circulate as:



5.Wifi button

Press " Wifi " button to turn on or turn off Wifi function. When Wifi button function is turned on, the Wifi button indicator will be displayed. Press and hold the button for 10s to reset Wifi button function.

6.Swing button

Press this button , horizontal louver of air conditioner will swing up&down automatically.Single press it to switch over between on and off.

Using the remote controller

This is a general use remote controller, it could be used for the air conditioners with multifunction; For some function, which the model doesn't have, if press the corresponding button on the remote controller that the unit will keep the original running status.


How to use the remote controller

Point the remote control toward the signal receiver and press the desired button. The unit generates a beep when it receives the signal.

- Make sure nothing, such as curtains, blocks the signal receiver window.
- The signal effective distance is no more than 8m.

⚠ CAUTION:

- Do not expose the receiver window to direct sunlight. This may adversely affect its operation.
- Use of certain fluorescent lamp in the same room may interfere with transmission of the signal.
- Do not leave the remote control in direct sunlight or near a heater. Protect the remote control from moisture and shock.

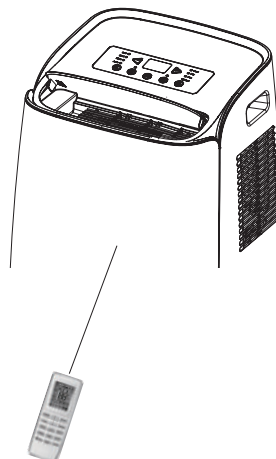


6.2 Remote Controller Introduction

Buttons on remote controller



Introduction for icons on display screen

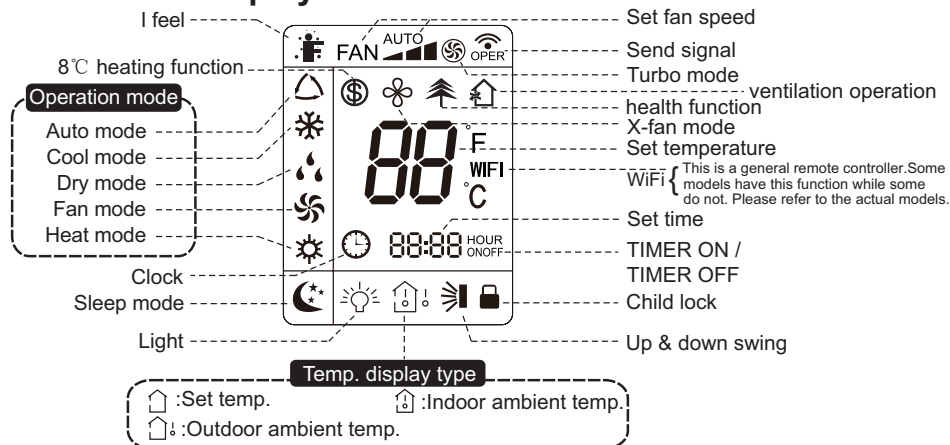

Introduction for buttons on remote controller

Note:

- This is a general use remote controller, it could be used for the air conditioners with multifunction; For some function, which the model doesn't have, if press the corresponding button on the remote controller that the unit will keep the original running status.
- After putting through the power, the air conditioner will give out a sound. Operation indicator "⏻" is ON (red indicator, the colour is different for different models). After that, you can operate the air conditioner by using remote controller.
- Under on status, pressing the button on the remote controller, the signal icon "📶" on the display of remote controller will blink once and the air conditioner will give out a "de" sound, which means the signal has been sent to the air conditioner.
- Under off status, set temperature and clock icon will be displayed on the display of remote controller (If timer on, timer off and light functions are set, the corresponding icons will be displayed on the display of remote controller at the same time); Under on status, the display will show the corresponding set function icons.

1. ON/OFF button

Press this button to turn on the unit. Press this button again to turn off the unit.


2. ▲ button

Press this button to increase set temperature. Holding it down above 2 seconds rapidly increases set temperature. In AUTO mode, set temperature is not adjustable.

3. MODE button

Each time you press this button, a mode is selected in a sequence that goes from AUTO, COOL, DRY, FAN, and HEAT *, as the following:

AUTO ► COOL ► DRY ► FAN ► HEAT*



After energization, AUTO mode is defaulted. In AUTO mode, the set temperature will not be displayed on the LCD, and the unit will automatically select the suitable operation mode in accordance with the room temperature to make indoor room comfortable.

4. SWING button

Press this button to set up & down swing angle, which circularly changes as below:



This remote controller is universal. If any command , or is sent out, the unit will carry out the command as . indicates the guide louver swings as: .

5. ▼ button

Press this button to decrease set temperature. Holding it down above 2 seconds rapidly decreases set temperature. In AUTO mode, set temperature is not adjustable.

6. FAN button

This button is used for setting Fan Speed in the sequence that goes from AUTO, , , to , then back to Auto.



Note:

- Under AUTO speed, air conditioner will select proper fan speed automatically according to ex-factory setting.
- It's Low fan speed under Dry mode.
- X-FAN function: Hold fan speed button for 2s in COOL or DRY mode, the icon “” is displayed and the indoor fan will continue operation for a few minutes in order to dry the indoor unit even though you have turned off the unit. After energization, X-FAN OFF is defaulted. X-FAN is not available in AUTO, FAN or HEAT mode. This function indicates that moisture on evaporator of indoor unit will be blown after the unit is stopped to avoid mould.
 - Having set X-FAN function on: After turning off the unit by pressing ON/OFF button indoor fan will continue running for a few minutes. at low speed. In this period, Hold fan speed button for 2s to stop indoor fan directly.
 - Having set X-FAN function off: After turning off the unit by pressing ON/OFF button, the complete unit will be off directly.

7. TIMER OFF button

Press this button to initiate the auto-off timer. To cancel the auto-timer program, simply press the button again. TIMER OFF setting is the same as TIMER ON.

8. CLOCK button

Press CLOCK button, blinking. Within 5 seconds, pressing or button adjusts the present time. Holding down either button above 2 seconds increases or decreases the time by 1 minute every 0.5 second and then by 10 minutes every 0.5 second. During blinking after setting, press CLOCK button again to confirm the setting, and then will be constantly displayed.

9. TIMER ON button


Press this button to initiate the auto-ON timer. To cancel the auto-timer program, simply press this button again. After press of this button, disappears and "ON "blinks. 0 0:00 is displayed for ON timesetting. Within 5 seconds, press or button to adjust the time value. Every press of either button changes the time setting by 1 minute. Holding down either button rapidly changes the time setting by 1 minute and then 10 minutes. Within 5 Seconds after setting, press TIMER ON button to confirm.

10. SLEEP button

Press this button to go into the SLEEP operation mode. Press it again to cancel this function. This function is available in COOL, HEAT (Only for models with heating function) to maintain the most comfortable temperature for you.

11. TEMP button

Press this button, you can see indoor set temperature, indoor ambient temperature on indoor unit's display. The setting on remote controller is selected circularly as below:



When selecting "⏏" with remote controller or no display, temperature indicator on indoor unit displays set temperature; When selecting "⏏" with remote controller, temperature indicator on indoor unit displays indoor ambient temperature; 3s later or within 3s it receives other remote controller signal that will return to display the setting temperature.


Caution:




- This model hasn't outdoor ambient temperature display function. While remote controller can operate "⏏" and indoor unit displays set temperature.
- It's defaulted to display set temperature when turning on the unit.
- Only for the models with temperature indicator on indoor unit.

12. TURBO button

Press this button to activate / deactivate the Turbo function which enables the unit to reach the preset temperature in the shortest time. In COOL mode, the unit will blow strong cooling air at super high fan speed. In HEAT mode, the unit will blow strong heating air at super high fan speed.

13. X-FAN | button

X-FAN function: In COOL or DRY mode, the icon  is displayed and the indoor fan will continue operation for 2 minutes in order to dry the indoor unit even though you have turned off the unit. After energization, X-FAN OFF is defaulted. X-FAN is not available in AUTO, FAN or HEAT mode.





 function: turn on the display's light and press this button again to turn off the display's light. If the light is turned on,  is displayed. If the light is turned off,  disappears.

14. WiFi button

Press "WiFi" button to turn on or turn off WiFi function. When WiFi function is turned on, the "WiFi" icon will be displayed on remote controller; Under status of unit off, press "MODE" and "WiFi" buttons simultaneously for 1s, WiFi module will restore to factory default setting.



- This function is only available for some models.

15. button

Press this button to achieve the on and off of healthy and scavenging functions in operation status. Press this button for the first time to start scavenging function; LCD displays "". Press the button for the second time to start healthy and scavenging functions simultaneously; LCD displays "" and "". Press this button for the third time to quit healthy and scavenging functions simultaneously. Press the button for the fourth time to start healthy function; LCD display "". Press this button again to repeat the operation above. (This function is applicable to partial of models)

Function introduction for combination buttons

Combination of "▲" and "▼" buttons: About lock

Press "▲" and "▼" buttons simultaneously to lock or unlock the keypad. If the remote controller is locked,  is displayed. In this case, pressing any button,  blinks three times.

Combination of "MODE" and "▼" buttons:

About switch between Fahrenheit and centigrade

At unit OFF, press "MODE" and "▼" buttons simultaneously to switch between °C and °F .


Combination of "TEMP" and "CLOCK" buttons:

About Energy-saving Function

Press "TEMP" and "CLOCK" simultaneously in COOL mode to start energy-saving function. Nixie tube on the remote controller displays "SE". Repeat the operation to quit the function.

Combination of "TEMP" and "CLOCK" buttons:

About 8°C Heating Function

Press "TEMP" and "CLOCK" simultaneously in HEAT mode to start 8°C Heating Function Nixie tube on the remote controller displays "" and a selected temperature of "8°C ". (46 °F if Fahrenheit is adopted). Repeat the operation to quit the function.

"If "H1" is displayed on the remote controller while it's not operated by the professional person/after-sales person, it belongs to the misoperation.

Please operate it as below to cancel it. Under the OFF status of remote controller, hold the "MODE" button and "X-FAN" buttons simultaneously for 5s to cancel "H1" display.

Note:

- If remote controller displays "H1", it belongs to the normal function reminder. If the unit is defrosting under heating mode, it operates according to H1 defrosting mode. "H1" won't be displayed on the panel of indoor unit;
- Once you set H1 mode, if you turn off unit by remote controller, H1 will display 3 times on the remote controller and then disappear;
- Also, when you set H1 mode, when you change to heating mode, H1 will display 3 times on the remote controller and then disappear."

I FEEL Function

Press "▲" and "MODE" buttons simultaneously to start I FEEL function and "I FEEL" will be displayed on the remote controller. After this function is set, the remote controller will send the detected ambient temperature to the controller and the unit will automatically adjust the indoor temperature according to the detected temperature. Press these two buttons simultaneously again to close I FEEL function and "I FEEL" will disappear.


- Please put the remote controller near user when this function is set. Do not put the remote controller near the object of high temperature or low temperature in order to avoid detecting inaccurate ambient temperature.
- When I FEEL function is turned on, the remote controller should be put within the area where indoor unit can receive the signal sent by the remote controller.

Operation guide

1. After putting through the power, press "ON/OFF" button on remote controller to turn on the air conditioner.
2. Press "MODE" button to select your required mode: AUTO, COOL, DRY, FAN, HEAT.
3. Press "▲" or "▼" button to set your required temperature. (Temperature can't be adjusted under auto mode).
4. Press "FAN" button to set your required fan speed: auto, low, medium and high speed.
5. Press "SWING" button to select fan blowing angle.

Replacement of batteries in remote controller

1. Press the back side of remote controller marked with "COVER", as shown in the fig, and then push out the cover of battery box along the arrow direction.
2. Replace two 7# (AAA 1.5V) dry batteries, and make sure the position of "▲" polar and "▼" polar are correct.
3. Reinstall the cover of battery box.

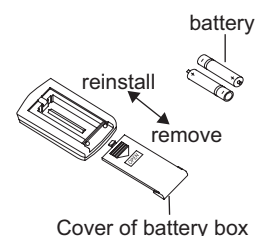

Note:

- During operation, point the remote control signal sender at the receiving window on indoor unit.
- The distance between signal sender and receiving window should be no more than 8m, and there should be no obstacles between them.
- Signal may be interfered easily in the room where there is fluorescent lamp or wireless telephone; remote controller should be close to indoor unit during operation.
- Replace new batteries of the same model when replacement is required.
- When you don't use remote controller for a long time, please take out the batteries.
- If the display on remote controller is fuzzy or there's no display, please replace batteries.

6.3 Introduction of Basic Mode Function

1. Temperature Parameter

- ◆ Indoor setting temperature (T_{preset})
- ◆ Indoor ambient temperature (T_{amb.})


2. Basic Functions of System

After the unit is energized, the interval of start-up time for compressor is no less than 3min under any conditions; when the compressor is started, the unit is off without the temperature change in 6min.

2.1 Cool Mode

2.1.1 Working conditions and process of cooling

- a) When $T_{amb.} \geq T_{preset} + 1^{\circ}\text{C}(2^{\circ}\text{F})$, the unit will start to run in cooling mode, the compressor and draw water motor start to run, and fan motor runs under preset fan speed.
- b) When $T_{amb.} \leq T_{preset} - 1^{\circ}\text{C}(2^{\circ}\text{F})$, the compressor and kick motor stop to run, and fan motor runs under preset fan speed.
- c) When $T_{preset} - 1^{\circ}\text{C}(2^{\circ}\text{F}) < T_{amb.} < T_{preset} + 1^{\circ}\text{C}(2^{\circ}\text{F})$, the unit will keep the current running status. Under this mode, the temperature setting range is $16^{\circ}\text{C}-30^{\circ}\text{C}(61^{\circ}\text{F}-86^{\circ}\text{F})$.

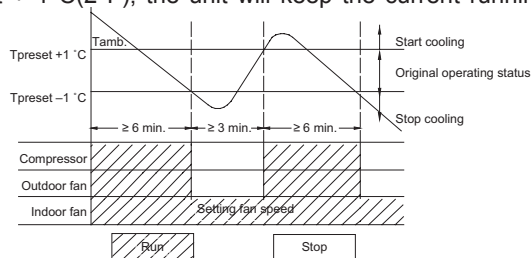

- a) Under cooling mode, after 1h of setting sleep process, T_{preset} increases 2°F(1°C); 2h later, T_{preset} increases 4°F(2°C). After 2h, the setting temperature never increases, but the upper limit of increased setting temperature is 86°F(30°C)
- b) Under heating mode, after 1h of setting sleep process, T_{preset} decreases 2°F(1°C); 2h later, T_{preset} decreases 4°F(2°C). After 2h, the setting temperature never decreases, but the upper limit of decreased setting temperature is 61°F(16°C)
- c) There is no sleep function under fan and dry mode.
- d) When set sleep function, shift mode will cancel sleep function.
- e) The setting temperature display is the same with remote controller; it is not influenced by the setting temperature increases/ decreases.

2.2 Heating mode

When $T_{amb.} \leq T_{preset} + 3^{\circ}\text{C}(6^{\circ}\text{F})$, the unit operates in heating mode. Meanwhile, 4-way valve, compressor operates, and indoor fan operates at cold air prevention condition;

When $T_{preset} + 3^{\circ}\text{C}(6^{\circ}\text{F}) < T_{amb.} < T_{preset} + 5^{\circ}\text{C}(10^{\circ}\text{F})$, the unit keeps original operation status,

When $T_{amb.} \geq T_{preset} + 5^{\circ}\text{C}(10^{\circ}\text{F})$, compressor stop operation simultaneously. 4-way valve stop operation after the compressor has stopped for 2 minutes. Indoor fan operates at blowing residual heat conditioner.

Under this mode, the temperature setting range is $16-30^{\circ}\text{C}(61-86^{\circ}\text{F})$.

3.3 Auto Fan

- a) Auto fan speed under Cooling mode; Heating mode;

$T_{amb.} \geq T_{preset} + 4^{\circ}\text{F}(2^{\circ}\text{C})$	High fan;	$T_{amb.} \leq T_{preset} + 2^{\circ}\text{C}(4^{\circ}\text{F})$, the upper fan operate at high fan speed;
$T_{preset} < T_{amb.} < T_{preset} + 4^{\circ}\text{F}(2^{\circ}\text{C})$	Med fan;	$T_{preset} + 2^{\circ}\text{C}(4^{\circ}\text{F}) < T_{amb.} < T_{preset} + 4^{\circ}\text{C}(8^{\circ}\text{F})$, the upper fan operate at middle fan speed;
$T_{amb.} \leq T_{preset}$	Low fan;	$T_{amb.} \geq T_{preset} + 4^{\circ}\text{C}(8^{\circ}\text{F})$, the upper fan operates at low fan speed;
- b) There is 3.5min delay for auto fan shift.
- c) Auto fan speed under

3.4 TIMER Function

● General timer

- a) TIMER ON: It can set timer on when the system is off, the setting time range is 0.5h-24h, when the time of setting timer on reaches, and the system runs with the previous setting mode.
- b) TIMER OFF: It can set timer on when the system is on, the setting time range is 0.5h-24h, when the time of setting timer off reaches, the system stop to work.

● Clock timer

- a) TIMER ON: If set timer on when the system is running, it continues to run; if set timer on when the system is off, when the time of setting timer on reaches, and the system runs with the previous setting mode.
- b) TIMER OFF: If set timer off when the system is off, the system keeps the stand-by status when setting timer off; if set timer off when the system is on, when the time of timer off reaches, the system stops to run.

3.5 Memory Function

The system memories the setting running status of previous power-off, and runs automatically with the setting running status before it power-off when it is energized again. If the unit is on before power-off, the compressor will 3min delay protection when it is energized again.

3.6 Indicator Lamp, dual-8 digital pipe

- a) When the unit runs under cooling mode, cooling indicator lamp lights, dual-8 displays preset temperature.
- b) When the unit runs under fan mode, fan indicator lamp lights, dual-8 does not display.
- c) When the unit runs under dry mode, dry indicator lamp lights, dual-8 does not display.
- d) When the unit runs under heating mode, heating indicator lamp lights, dual-8 displays preset temperature.

3.7 Setting button function

- a) ON/OFF button: It controls systems switch.
- b) Mode button: Mode setting cycle with below sequence: Cooling only unit: cooling-> dry-> fan.
Heating unit:cooling->dry->fan->heating
- c) Temp. "-" button: Set temperature when the unit is on, the setting temperature decreases 1°C or °F per press
Temp. "-" button; it will never setting when the setting reaches to 16°C or 61°F. The button is not valid under auto, dry and fan mode.
- d) Temp. "+" button: Set temperature when the unit is on, the setting temperature increases 1°C or °F per press
Temp. "+" button; it will never setting when the setting reaches to 30°C or 86°F. The button is not valid under auto, dry and fan mode.

3.8 Light Control

If set the light is on with remote control, the indicator lamp and dual-8 display the current setting status; if set the light is off with remote control, turn off the lamp immediately. If there is front panel button or remote control button operation when setting light off with remote control, the indicator lamp and dual-8 display current setting status, and turn off the light 5S later. Remote control light button does not controlled by failure display.

3.9 Protection Function

● Anti-freeze Protection

When the anti-freeze protection is inspected, the compressor stops, fan motor runs with setting fan speed.

When the anti-freeze protection is canceled and reaches to the 3min time-delay, it runs with the original status.

Temperature sensor failure inspection

- a) Environment temperature sensor is open, short circuit: dual-8 displays F1,compressor and motor stop operation. When the fan operates for 2mins, the complete unit will be turned off;
- b) Indoor pipe temperature sensor is open, short circuit: dual-8 displays F2,compressor and motor stop operation. When the fan operates for 2mins, the complete unit will be turned off;
- c) Outdoor pipe temperature sensor is open, short circuit: dual-8 displays F4,compressor and motor stop operation. When the fan operates for 2mins, the complete unit will be turned off;

● Over-flow Protection

If the over-flow is detected for 3S, it will enter into over-flow protection. Display error code H8.The buzzer gives off 8 sounds. Compressor and motor stop operation. When the fan operates for 2mins, the complete unit will be turned off.



Appliance filled with flammable gas R290.



Before install and use the appliance, read the owner's manual first.



Before install the appliance, read the installation manual first.




Before repair the appliance, read the service manual first.

The Refrigerant

- To realize the function of the air conditioner unit, a special refrigerant circulates in the system. The used refrigerant is the fluoride R290, which is specially cleaned. The refrigerant is flammable and inodorous. Furthermore, it can lead to explosion under certain conditions.
- Compared to common refrigerants, R290 is a nonpolluting refrigerant with no harm to the ozone layer. The influence upon the greenhouse effect is also lower. R290 has got very good thermodynamic features which lead to a really high energy efficiency. The units therefore need a less filling.
- Please refer to the nameplate for the charging quantity of R290.

WARNING :

- Appliance filled with flammable gas R290.
- Appliance shall be installed, operated and stored in a room with a floor area larger than 15 m².
- The appliance shall be stored in a room without continuously operating ignition sources. (for example: open flames, an operating gas appliance or an operating electric heater.)
- The appliance shall be stored in a well-ventilated area where the room size corresponds to the room area as specified for operation.
- The appliance shall be stored so as to prevent mechanical damage from occurring.
- Ducts connected to an appliance shall not contain an ignition source.
- Keep any required ventilation openings clear of obstruction.
- Do not pierce or burn.
- Be aware that refrigerants may not contain an odour.
- Do not use means to accelerate the defrosting process or to clean, other than those recommended by the manufacturer.
- Servicing shall be performed only as recommended by the manufacturer.
- Should repair be necessary, contact your nearest authorized Service Centre. Any repairs carried out by unqualified personnel may be dangerous.
- Compliance with national gas regulations shall be observed.
- Read specialist's manual.



1 Safety Principle of Maintenance

1. The maintenance spot must have good ventilation. Do not close the door or the window.
2. Do not use naked flame, including welding, smoking. Do not use mobile phone. Tell the user not to cook with naked flame.
3. Take antistatic measures, including wearing pure cotton clothes and gloves etc.
4. If flammable refrigerant leakage is found during maintenance, it is a must to reinforce ventilation, and block the leak source.
5. During maintenance, it is necessary to keep the spot safe when fetching the lacked spare parts.
6. It is necessary to keep the case of the air conditioner grounded during maintenance.
7. When carrying the refrigeration steel cylinder to the user's place, the refrigeration inside shall not exceed the rated value. The steel cylinder must be vertical and away from the heat source, fire source, radiation source and electric appliance.
8. It is necessary to carry the unit to the service center for maintenance, when
 - (1) inner refrigerant pipe must be welded;
 - (2) disassembling the heat exchanger; e.g. replacing chassis of outdoor unit, removing condenser;
 - (3) replacing compressor or components of cooling system.
9. The maintenance unrelated to refrigerant vessel, inner refrigerant pipe and cooling component can be performed in the user's place, including cleaning the cooling system and sludging.
10. Ensure that the density tester is working during maintenance.
11. Ensure there is necessary safety precaution and emergency measures on the spot. Put suitable fire extinguishers(CO2 or dry powder) in the nearest area.
12. There must be natural ventilation in the maintenance spot.
13. The maintenance staff shall take safety actions.
14. Paste suitable signs such as "No Smoking" and "No Entry".

2 Preparation before Maintenance

1. Inspection of Environment

- (1) Ensure that electric product with radiation is power off in the maintenance area. All the persons in the room shall turn off the mobile phone.
- (2) Check if there is refrigerant leakage in the maintenance area. Ensure that all the leak testers are suitable for this air conditioner.
- (3) Ensure that the room area reaches the requirement.
- (4) Check if the maintenance area is ventilated. Keep the room ventilated.

2. Inspection of Air Conditioner

- (1) Ensure that the air conditioner is reliably grounded.
- (2) Ensure that the power supply of the air conditioner is cut off. Discharge the electricity of the capacitor. If power supply is necessary, perform leak test to prevent the potential danger.

3. Inspection of Maintenance Equipment

- (1) Check if the maintenance equipment is suitable for the refrigerant. Only the special equipment recommended by the air conditioner supplier can be used.
- (2) The set alarm density of the leak tester shall not be higher than 25% of the LEL. The tester must keep operating during maintenance.

4. Leak Test before Maintenance

- (1) After cutting off the power supply, perform leak test with the recommended leak detector or density tester (pump suction type) (ensure the equipment is calibrated; leakage ratio of leak detector is 2g/year.)

Note: do not use solvent with chlorine in case causing corrosion of the steel pipe.

- (2) If leakage is found, remove all fire source ensure good ventilation of the area.

5. Check List

No.	Check information	Result	Yes/No
1	Maintenance equipment is complete		
2	Persons in the maintenance area turn off the mobile phone.		
3	Power supply of tools is 2m away.		
4	Density tester can be used.		
5	Other tools are normal.		
6	Maintenance staffs are qualified.		
7	The spare parts are provided by the manufacturer and qualified.		
8	The air conditioner needed to be serviced is under safe state.		
9	The wire of power socket is reliably connected.		
10	There is natural ventilation in maintenance area.		
11	There is no operating electric appliance or naked flame within 2m of Maintenance area.		

3 Maintenance Cautions

If it is necessary to replace components, all the components used shall be made by manufacturer. Otherwise, the supplier shall not bear the responsibility.

1. Maintenance of Electrical Parts

(1) Replace the power cord and connecting wire with that of the same specification.

(2) When inspecting the circuit with power on, check if there is electric leakage for the metal component such as evaporator or condenser. During inspection, do not touch the circuit so as to prevent electric shock.

(3) When inspecting the capacitor, ensure that the maintenance area is well ventilated. After conforming there is no refrigeration leakage, discharge electricity of capacitor.

(4) Before replacing the component, cut off the power supply of the air conditioner.

(5) Cut off the power before disconnecting and connecting the wire. Disconnect the live wire first and then ground wire.

(6) During maintenance, do not remove the protective component. Use the component of same supplier and specification.

(7) When servicing the hermetic parts, cut off the power of the air conditioner before opening the sealing cover. If it is necessary to use power

supply, perform leak test to prevent potential danger.

(8) Do not replace the case which may affect the protective grade.

(9) Ensure that the sealing material is not degraded and that it can prevent entry of flammable gas. The parts used for replacement must reach the requirement of the supplier.

2. Maintenance of Refrigeration System


(1) Do not lengthen or cut the connecting pipe.

(2) If the system component (such as evaporator, condenser, compressor, pipe) is needed to be serviced, discharge the refrigerant of the system completely before maintenance.


(3) The parts used for replacement must be made by manufacturer.

(4) It is necessary to perform leak test before and after maintenance and ensure there is no leakage.

(5). Replace electric box

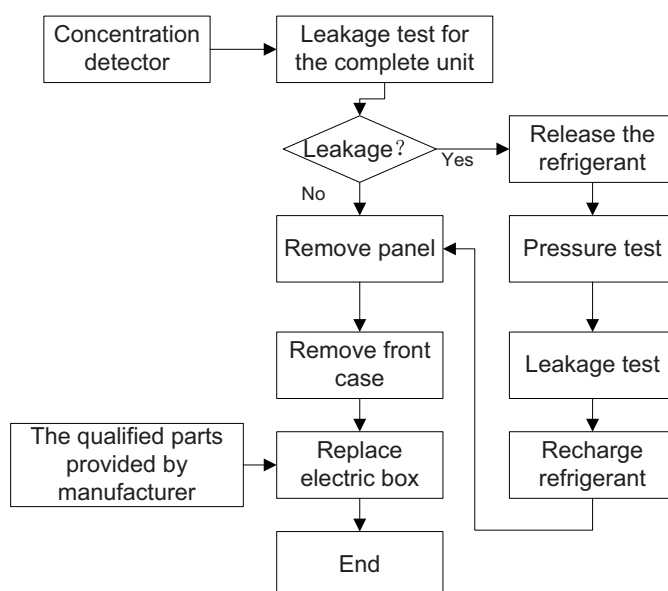

(7).Replace pipeline or repair welding

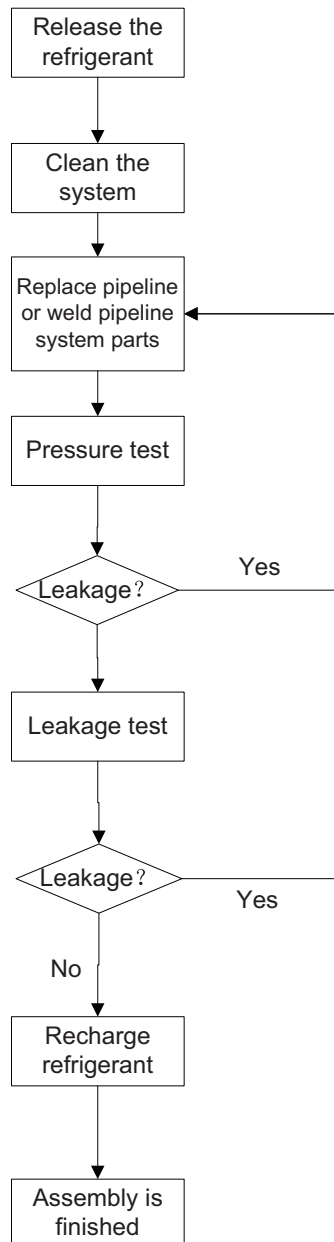

8. Installation Precaution



WARNING:

- Observe all governing codes and ordinances.
- Do not use damaged or non-standard power cord.
- Be caution during installation and maintenance. Prohibit incorrect operation to prevent electric shock, casualty and other accidents.

Selection of installation location

Basic requirement

Installing the unit in the following places may cause malfunction. If it is unavoidable, please consult the local dealer:

1. The place with strong heat sources, vapors, flammable or explosive gas, or volatile objects spread in the air.
2. The place with high-frequency devices (such as welding machine, medical equipment).
3. The place near coast area.
4. The place with oil or fumes in the air.
5. The place with sulfureted gas.
6. Other places with special circumstances.
7. It's not allowed to be installed on the unstable or motive base structure (such as truck) or in the corrosive environment (such as chemical factory).

Requirement of air conditioner

1. Air inlet should be far away from obstacles and do not put any objects near air outlet. Otherwise, it will affect the radiation of heat discharge pipe.
2. Select a location where the noise and outflow air emitted by the outdoor unit will not affect neighborhood.
3. Please try your best to keep far away from fluorescent lamp.
4. The appliance shall not be installed in the laundry.

Requirements for electric connection

Safety precaution









1. Must follow the electric safety regulations when installing the unit.
2. According to the local safety regulations, use qualified power supply circuit.
3. For appliances with type Y attachment, the instructions shall contain the substance of the following. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
4. Properly connect the live wire, neutral wire and grounding wire of power socket.
5. Be sure to cut off the power supply before proceeding any work related to electricity and safety.
6. Do not put through the power before finishing installation.
7. The air conditioner is first class electric appliance. It must be properly grounding with specialized grounding device by a professional. Please make sure it is always grounded effectively, otherwise it may cause electric shock.
8. The yellow-green wire or green wire in air conditioner is grounding wire, which can't be used for other purposes.
9. The grounding resistance should comply with national electric safety regulations.
10. The appliance shall be installed in accordance with national wiring regulations.
11. To be in compliance with IEC 61000-3-11, impedance value of power-supply system connected to product must be less than or equal to the allowable maximum value of $|Z_{sys}|$ in the following sheet:

models	max $ Z_{sys} $ unit:ohms
GPC10AN-K5NNA1A	0.13
GPC12AN-K5NNA1A	
GPH12AN-K5NNA1A	



Preparation before Installation

Note: check if the accessories are available before installation

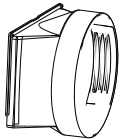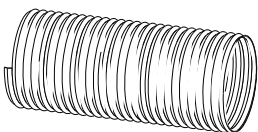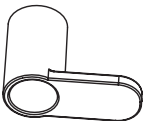






Accessory list

 Joint A	 Heat discharge pipe	 Drain connector
 Power cord hooks	 Screws	 Remote control
	 Battery (AAA 1.5V)	 User's manual






Optional 1

 Joint B	 Joint C
--	--

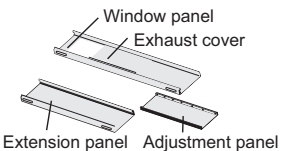





Optional 2

 Window kit	 Insect guard net	 Joint B	 Joint C
	 Bracket	 Sponge A	 Sponge B

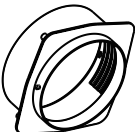Optional 3

 Joint D	 Joint E	 Joint F	 Joint G	 Plastic Cover
--	--	--	--	---


Tools needed for installation

 Cross screwdriver	 Straight screwdriver	 Saw
 Guge	 Scissors	 Pencil


9. Install

9.1 Install Power cord Hooks

- Assemble the power cord hooks at the back of the unit with screws (the direction of power cord hooks is as shown in following fig).

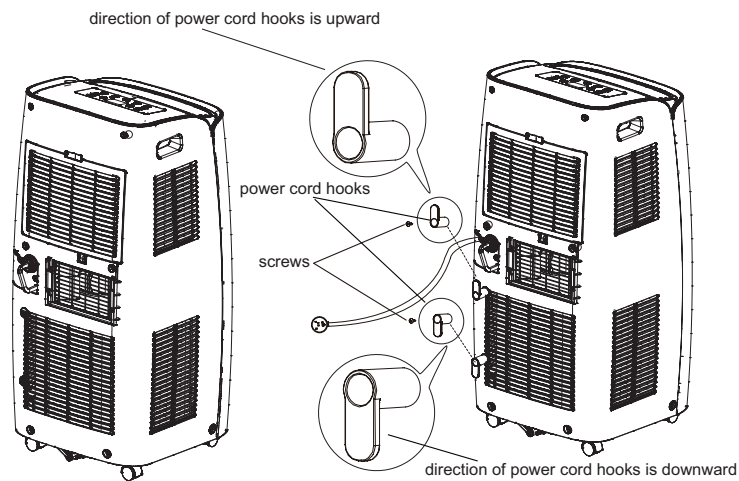

- Wind the power cord around the power cord hooks.

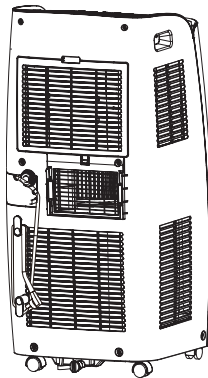

9.2 Removing Collected Water

There are 2 ways to remove collected water:


1. Use the drainage option from the lower hole.

In Cool, Dry or Heat mode operating, the condensation water will be drained to the chassis.

When the chassis is full with water, the buzzer will give out 8 sounds and "H8" is displayed to remind user to discharge water, the unit will turned off 2min latter, and all buttons are invalid.

To empty the chassis, please follow the instructions bellow.


- Turn the unit off and unplug from the electrical outlet.
- Use a small pan or move the unit to a suitable place to drain the water.
- Remove the pre-installed drain cap from the unit.
- Drain the water into the small pan or a suitable place.
- Once draining is complete, re-install drain cap.
- Press ON/OFF button to restart the unit.

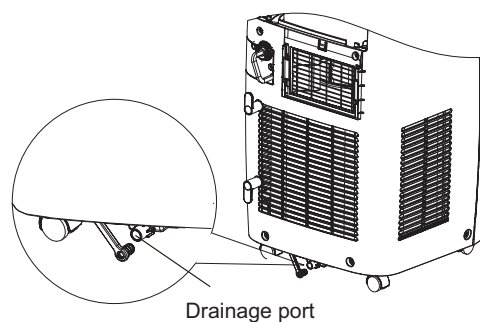


2. Use the continuous drainage option from the middle hole

NOTICE: Water can be automatically emptied into a floor drain by attaching 14mm inner diameter hose (not included).


(1) Remove the continuous drain cap 1 by turning it counter clockwise then remove the rubber stopper 2 from the spout.

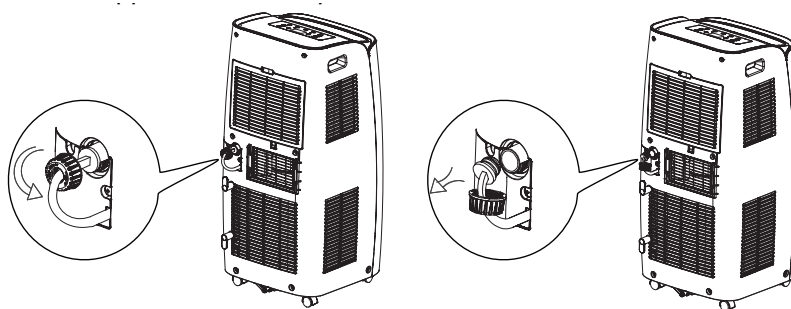

(2) Screw the drain connector to (included in the package) the spout by turning clockwise.

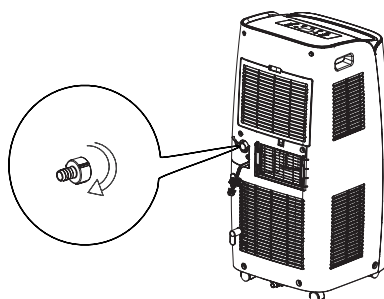


(3) Insert the drainage hose into drain connector.

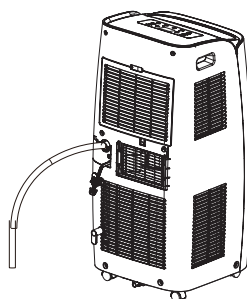


ATTENTION:

When using continuous drainage option from the middle hole, place portable on a level surface and make sure garden hose is clear of any obstructions and is directed downward. Placing portable on an uneven surface or improper hose installation may result in water filling up the chassis and causing the unit to shut off. Empty water in the chassis if shut off occurs, then check portable location and hose for proper setup.

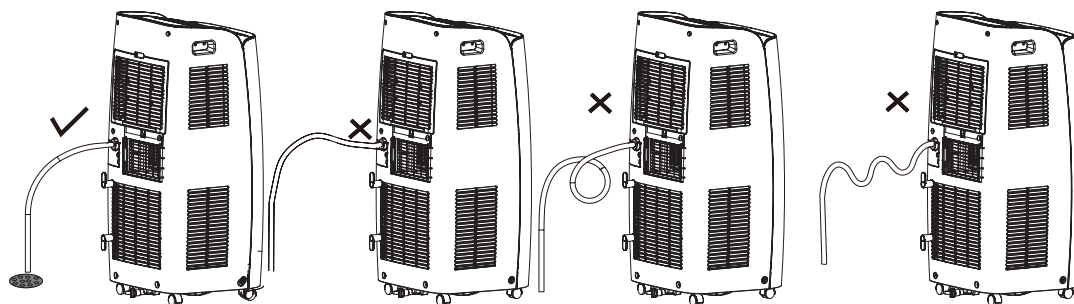


Optional 1: Installation in a double window


1. Connect joint B to joint C .

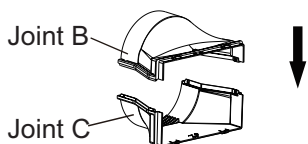


2. Rotate joint A and joint B+C into the two ends of heat discharge pipe.

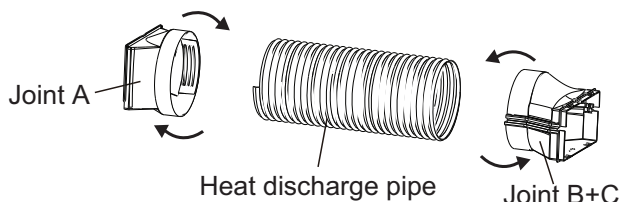

3. Insert joint A of heat discharge pipe (the side with "TOP" is upwards) into the groove until you hear a sound.

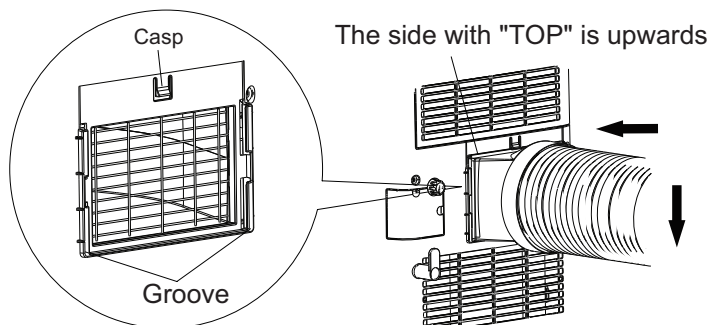


4. Lead the exhaust hose outdoors.

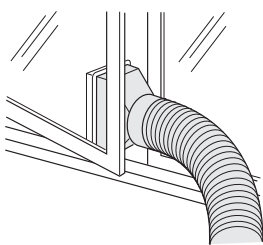


Optional 2-1: Installation in a double-hung sash window

1. Attach the insect guard net to the window panel.

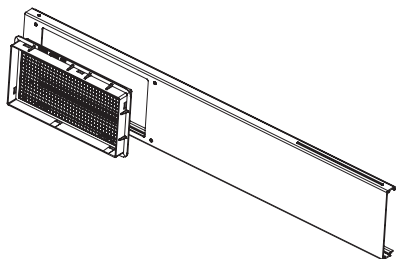

2. Cut the sponge A (adhesive type) to the proper length and attach it to the window stool and to the bottom of sash.

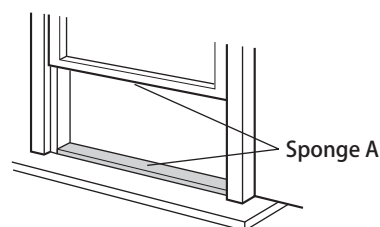


3. Attach the window panel to the window stool. Make sure that the exhaust cover is attached to the window panel.

Inner width of the window:20.5"(520mm)
Use the window panel.

The window panel cannot be installed in windows less than 20.5" (520mm) wide, as you will be unable to shut the exhaust cover.

(1) Open the window sash and place the window panel on the window sill.

(2) Secure the window panel to the window stool with screws.

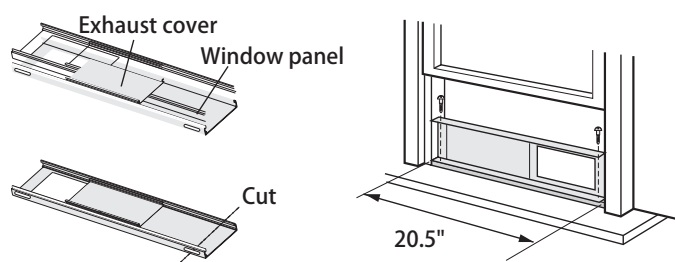


Inner width of the window:20.5" (520mm)- 38.5" (980mm)
Use the window panel and the adjustment panel.

(1) Open the window sash and place the window panel on the window sill.

(2) Slide the adjustment panel to fit the window frame width.

(3) Secure the window panel to the sill with screws.

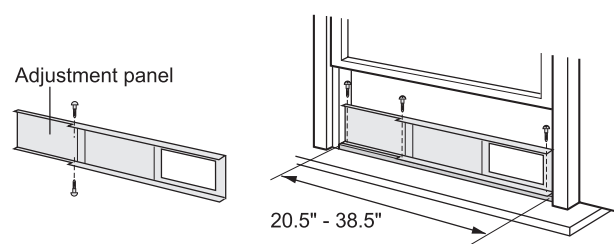


Inner width of the window:38.5" (980mm) - 59" (1500mm)
Use the window panel, the adjustment panel and the extension panel.


(1) Open the window sash and place the window panel on the window sill.

(2) Slide the adjustment and extension panels to fit the window frame width.


(3) Secure the window panel to the window sill with screws.

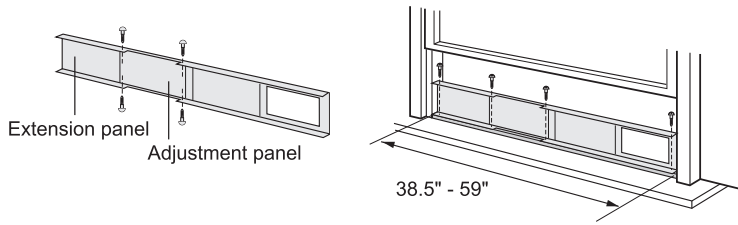


4. Close the window sash securely against the Window panel.

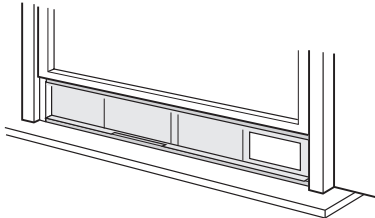


5. Stuff the sponge B between the glass and the window to prevent air and insects from getting into the room.

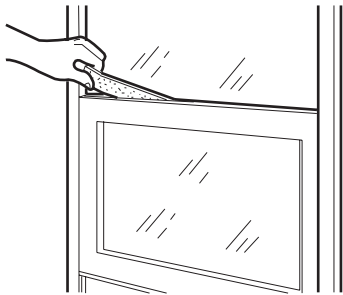


6. Attach the bracket with a screw.

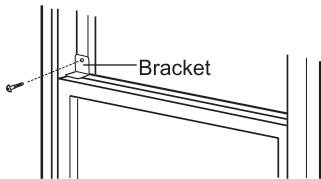


7. Connect joint B to joint C .

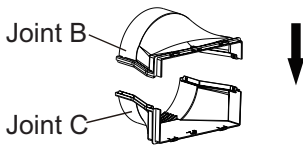


8. Rotate joint A and joint B+C into the two ends of heat discharge pipe.

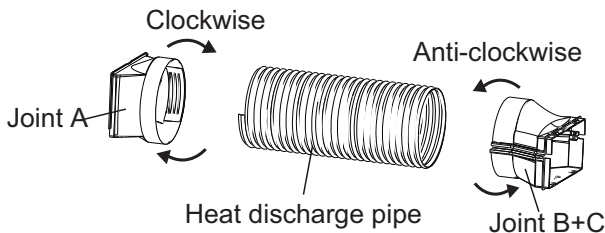

9. Insert joint A of heat discharge pipe (the side with "TOP" is upwards) into the groove until you hear a sound.

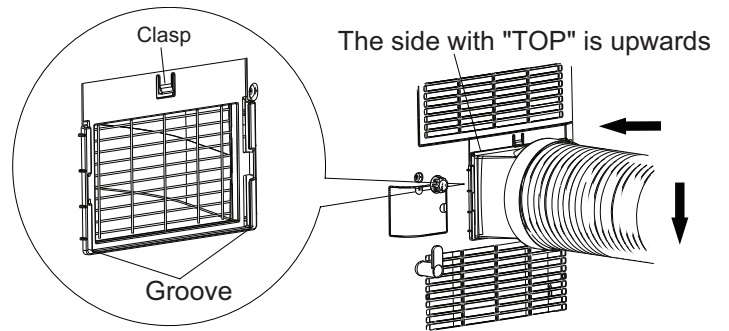


10. Slide and open the exhaust cover on the window panel, and attach the window adapter.

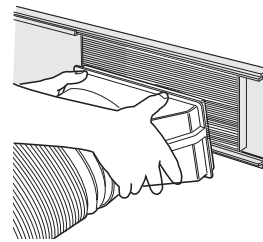


Optional 2-2: Installation in a sliding sash window

1. Attach the insect guard net to the window panel.

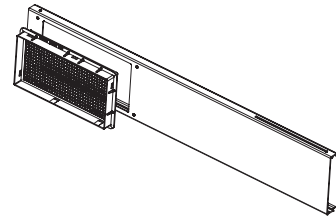

2. Cut the sponge A (adhesive type) to the proper length and attach it to the window frame and to the side of sash.

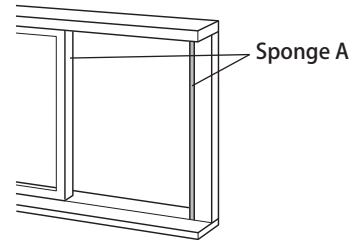


3. Install the window panel into the window frame. Make sure that the exhaust cover is attached to the window panel. Inner height of the window: 20.5" (520mm) Use the window panel.

The window panel cannot be installed in windows less than 20.5" (520mm) high, as you will be unable to shut the exhaust cover.


(1) Open the window sash and place the window panel on the window frame.

(2) Secure the window panel to the window frame with screws.

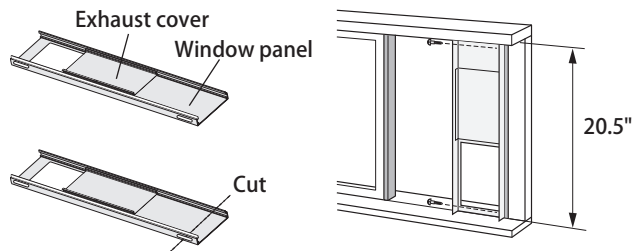


Inner height of the window: 20.5" (520mm) - 38.5" (980mm)
Use the window panel and the adjustment panel.

- (1) Open the window sash and place the window panel on the window frame.
- (2) Slide the adjustment panel to fit the window frame height.
- (3) Secure the window panel to the window frame with screws.

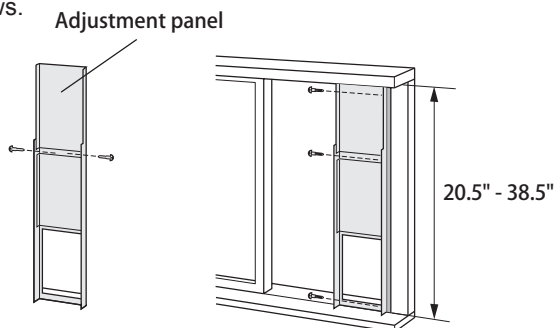


Inner height of the window: 38.5" (980mm) - 59" (1500mm)
Use the window panel, the adjustment panel and the extension panel.


- (1) Open the window sash and place the window panel on the window frame.
- (2) Slide the adjustment and extension panels to fit the window frame height.
- (3) Secure the window panel to the window frame with screws.

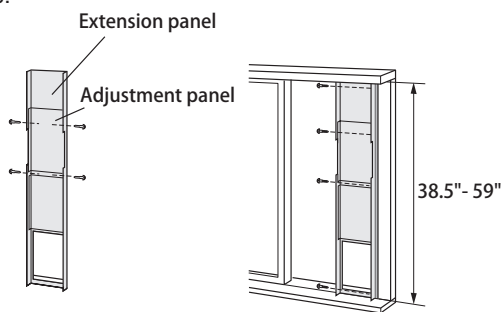


4. Close the window sash securely against the Window panel.

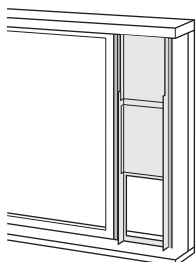


5. Stuff the foam seal B between the glass and the window to prevent air and insects from getting into the room.

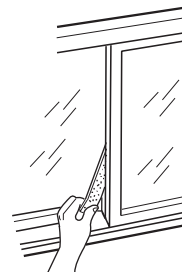


6. Attach the bracket with a screw.

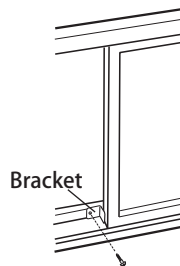


7. Installation of Heat Discharge Pipe
Connect joint B to joint C.

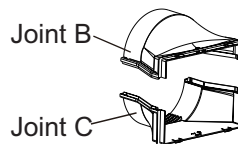

8. Rotate joint A and joint B+C into the two ends of heat discharge pipe.

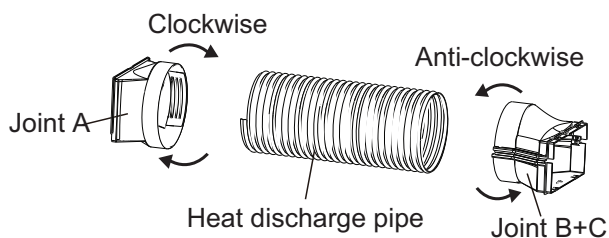


9. Insert joint A of heat discharge pipe (the side with "TOP" is upwards) into the groove until you hear a sound.

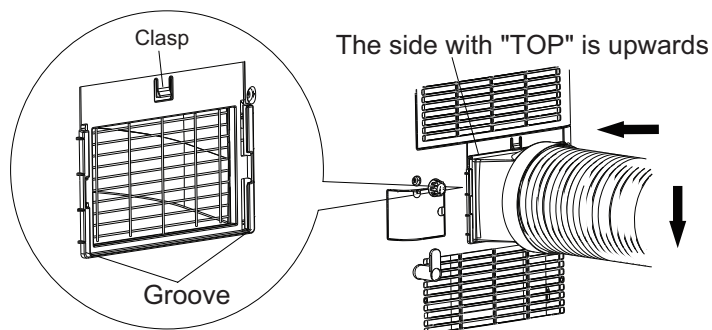


Optional 3-3: Installation in immovable window


1. Rotate joint A and joint D into the two ends of heat discharge pipe.

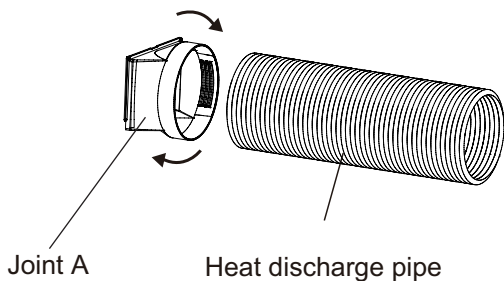



2. If the window is immovable, cut a hole to install joint F and joint G tightly.

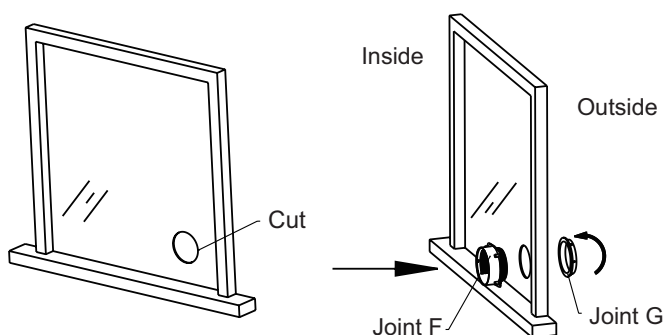

3. Install the other side of heat discharge pipe clockwise into joint F.

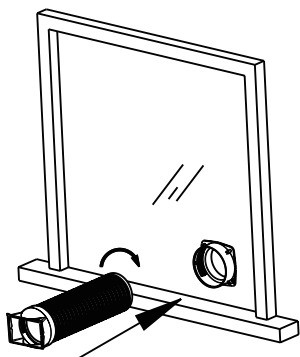


4. Insert joint A of heat discharge pipe (the side with "TOP" is upwards) into the groove until you hear a sound.

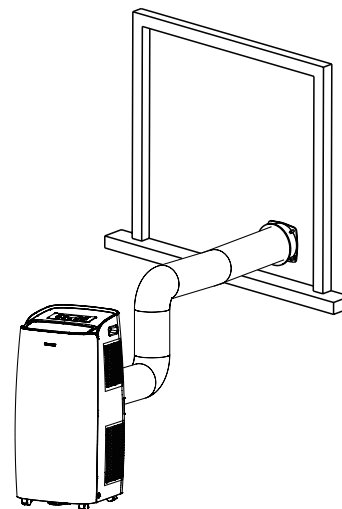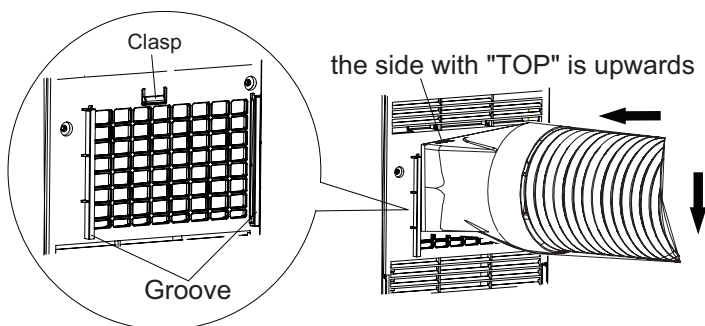


Optional 4: Disassemble for installation in double window

1. Remove joint A:
Press the clasp and lift joint A upwards to remove it.

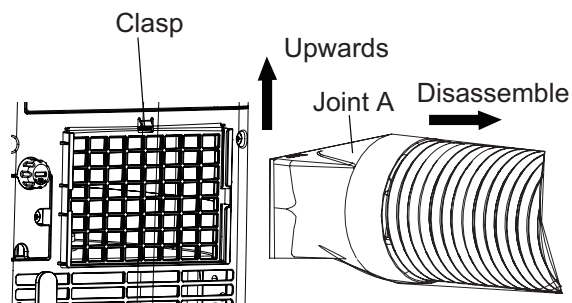


2. Remove joint B+C from outdoors.

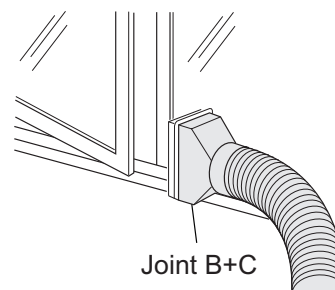


Optional 5: Disassemble for installation in sash window

1. Remove joint A:
Press the clasp and lift joint A upwards to remove it.

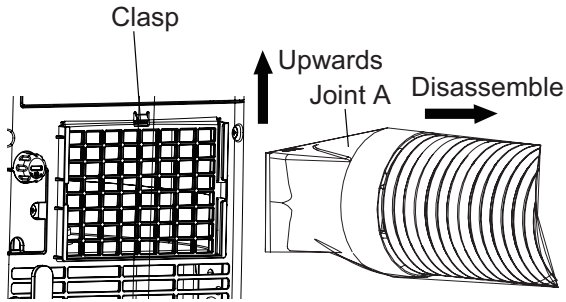


2. Remove the window adapter. Pull out and remove the window adapter by pushing down two "PUSH" markings, and slide and close the exhaust cover in the window panel. (Optional)

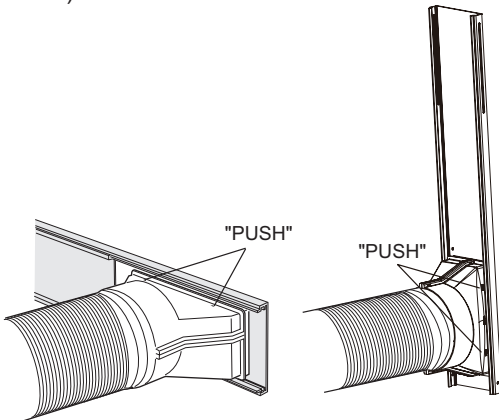


Optional 5-1: Disassembly for installation in window

1. Remove joint A:
Press the clasp and lift joint A upwards to remove it.

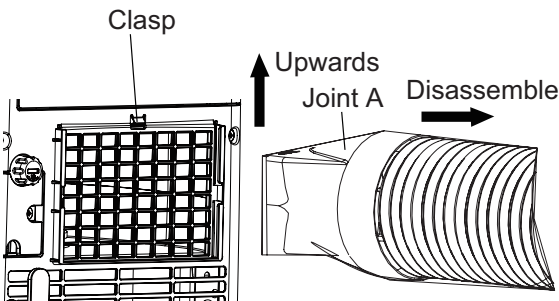


2. Remove joint D:
remove joint D from joint E.

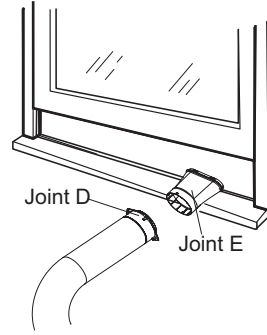


Optional 5-2: Disassembly for installation in the wall


1. Remove joint A:
Press the clasp and lift joint A upwards to remove it.

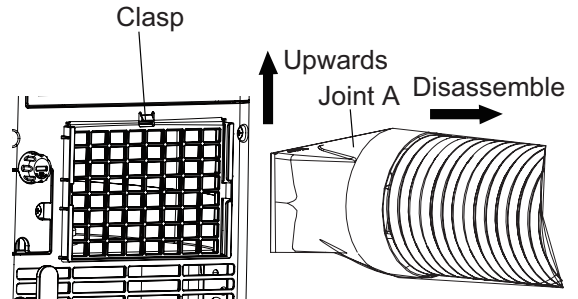

2. Remove joint D:
remove joint D from joint E.

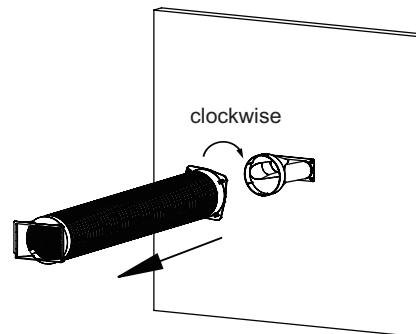


3. When heat discharge pipe is removed, Install the plastic cover into joint D in case of the insect into the house.

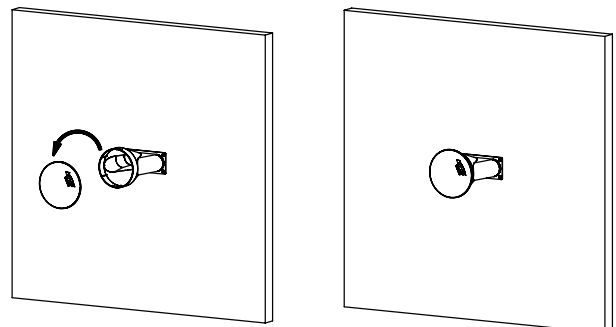


Optional 5-3: Disassembly for installation in immovable window

1. Remove joint A:


Press the clasp and lift joint A upwards to remove it.

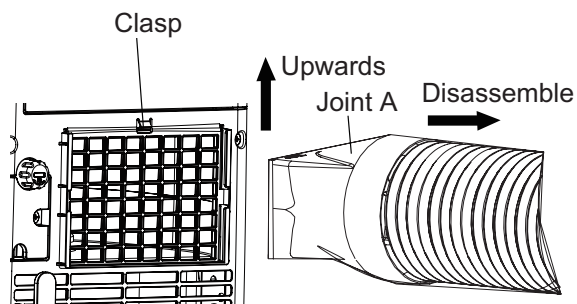

2. Remove the heat discharge pipe from the joint F.

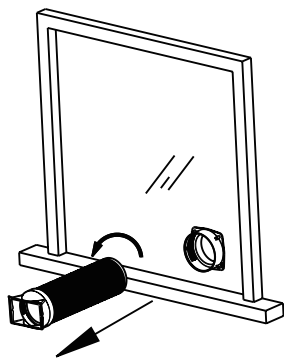

3. When heat discharge pipe is removed, install the plastic cover into joint F in case of the insect into the house .

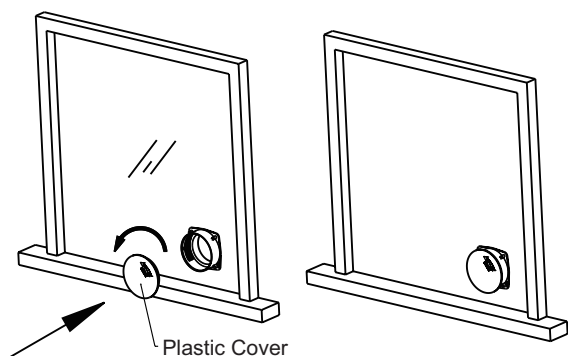

Operation Test

- Put through the power supply and then press ON/OFF button on remote controller to start the unit.
- Press mode button to select auto, cooling, drying, fan or heating function, and then check if the unit operates normally.
- If ambient temperature is below 16°C, the unit can't operate in cooling mode.


10. Maintenance

10.1 Error Code


NO.	Malfunction Name	Display Method of Indoor Unit	A/C Status	Possible Causes
		Error Code		
1	Indoor ambient temperature sensor is open/short-circuited	F1	Compressor and motor stop operation. When the fan operates for 2mins, the complete unit will be turned off;	1. The wiring terminal between indoor ambient temperature sensor and main board is loosened or poorly contacted.
				2. There's short circuit due to trip-over of the parts on main board.
				3. Indoor ambient temperature sensor is damaged (Please check it by referring to the resistance table for temperature sensor).
				4. Main board is damaged.
2	Indoor evaporator temperature sensor is open/short-circuited	F2	Compressor and motor stop operation. When the fan operates for 2mins, the complete unit will be turned off;	1. The wiring terminal between indoor evaporator temperature sensor and main board is loosened or poorly contacted.
				2. There's short circuit due to the trip-over of the parts on main board.
				3. Indoor evaporator temperature sensor is damaged (Please check it by referring to the resistance table for temperature sensor).
				4. Main board is damaged.
3	Outdoor condenser temperature sensor is open/short-circuited	F4	Compressor and motor stop operation. When the fan operates for 2mins, the complete unit will be turned off;	1. The wiring terminal between outdoor condenser temperature sensor and main board is loosened or poorly contacted.
				2. There's short circuit due to the trip-over of the parts on main board.
				3. Outdoor condenser temperature sensor is damaged (Please check it by referring to the resistance table for temperature sensor).
				4. Main board is damaged.
4	Insufficient fluorine protection	F0	The compressor stops operation. The indoor fan operates at set fan speed, and the outdoor fan operates at low fan speed. Buttons are invalid.	Please contact the after-sales person to deal with it.
5	Water over-flow protection	H8	Compressor and motor stop operation. When the fan operates for 2mins, the complete unit will be turned off;	During cooling or drying operation, condensate water will flow into chassis. If its detected that water inside water chassis is full for 3s successively, it comes into water over-flow protection. Buzzer will give out 8 sounds and dual-8 nixie tube displays error code "H8".
6	Overload protection for compressor	H3	The compressor stops operation. Indoor fan operate at current fan speed and the outdoor fan operates at low fan speed;	1. Heat exchangers are too dirty or the air inlet/outlet is blocked.
				2. The fan operates abnormally; fan speed is too low or the fan doesn't run.
				3. Compressor doesn't work normally. Strange noise or leakage occurs. Temperature of the shell is too high.
				4. System is blocked inside (dirt block, ice block, oil block, Y-valve not fully open).
				5. Draw-water motor can't operate normally.
				6. Water outlet hasn't been blocked well by rubber cork.
				7. The refrigerant is leaking and cause overheating protection to compressor.

NO.	Malfunction Name	Display Method of Indoor Unit Error Code	A/C Status	Possible Causes
7	Overload malfunction	E8	Indoor and outdoor fan keeps on running, other loads stop operation	<ol style="list-style-type: none"> 1. The environment is formidable. 2. Heat exchangers are too dirty or the air inlet/outlet is blocked. 3. Fan motor is not working Abnormal fan speed; fan speed is too low or the fan doesn't run. 4. Compressor doesn't work normally. Strange noise or leakage occurs. Temperature of the shell is too high. 5. System is blocked inside (dirt block, ice block, oil block, Y-valve not fully open). 6. Temperature sensor of main board can't detect correctly.


(2) Bucket full protection H8

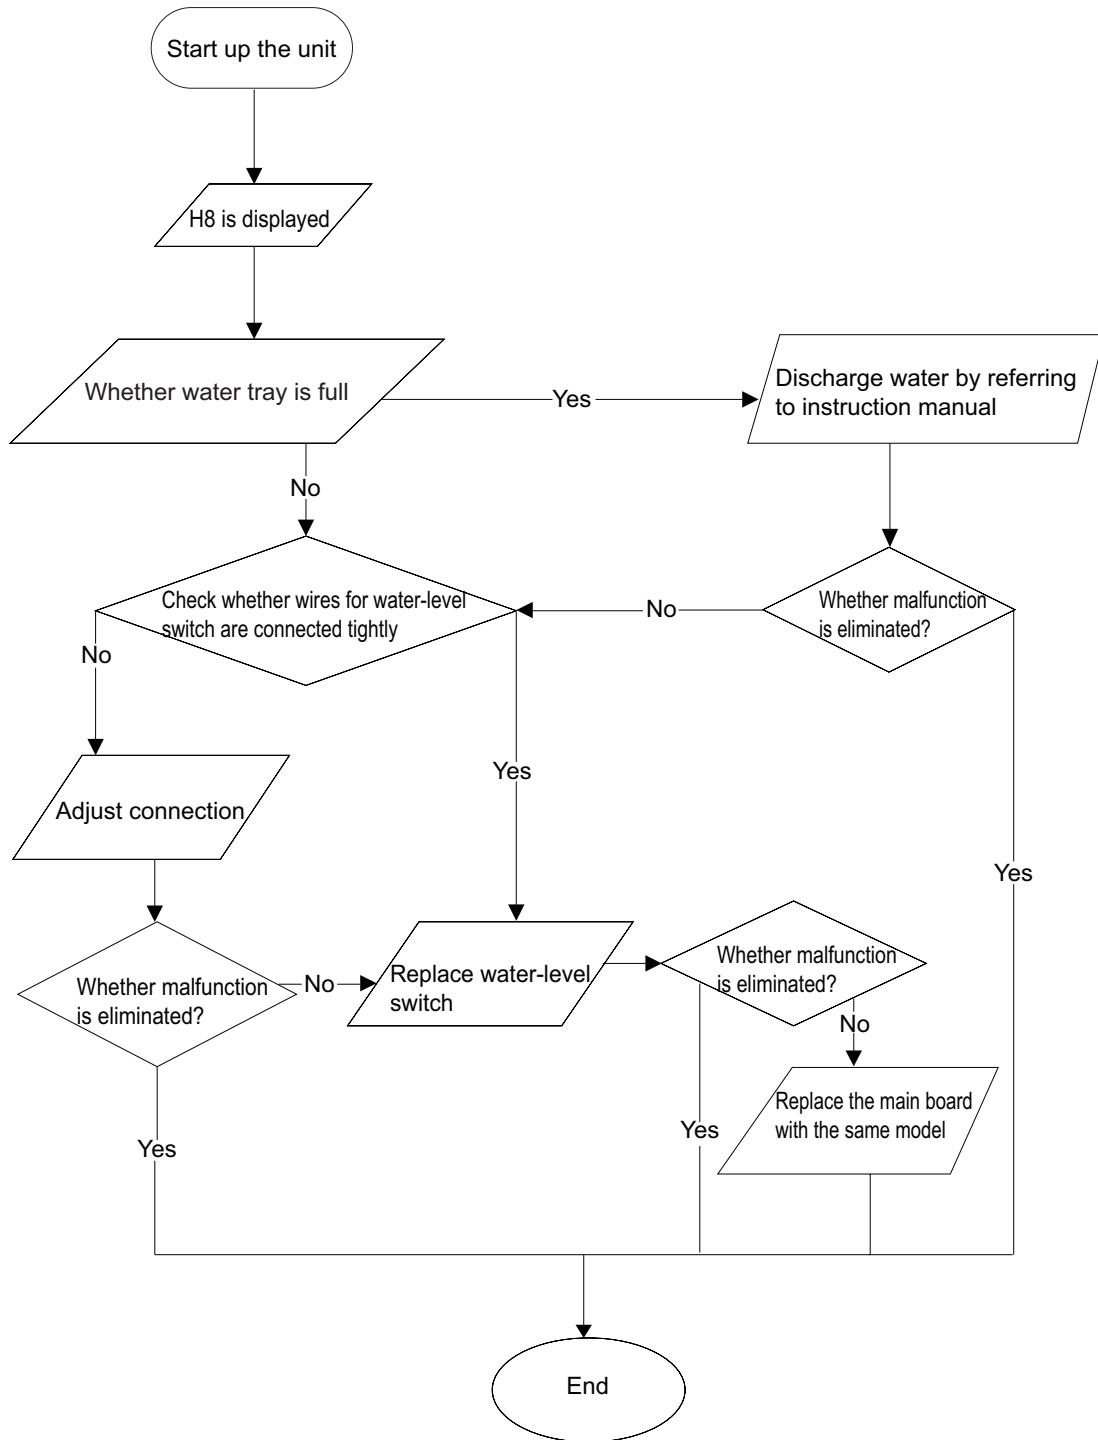

(3) Malfunction of Overload protection for compressor H3

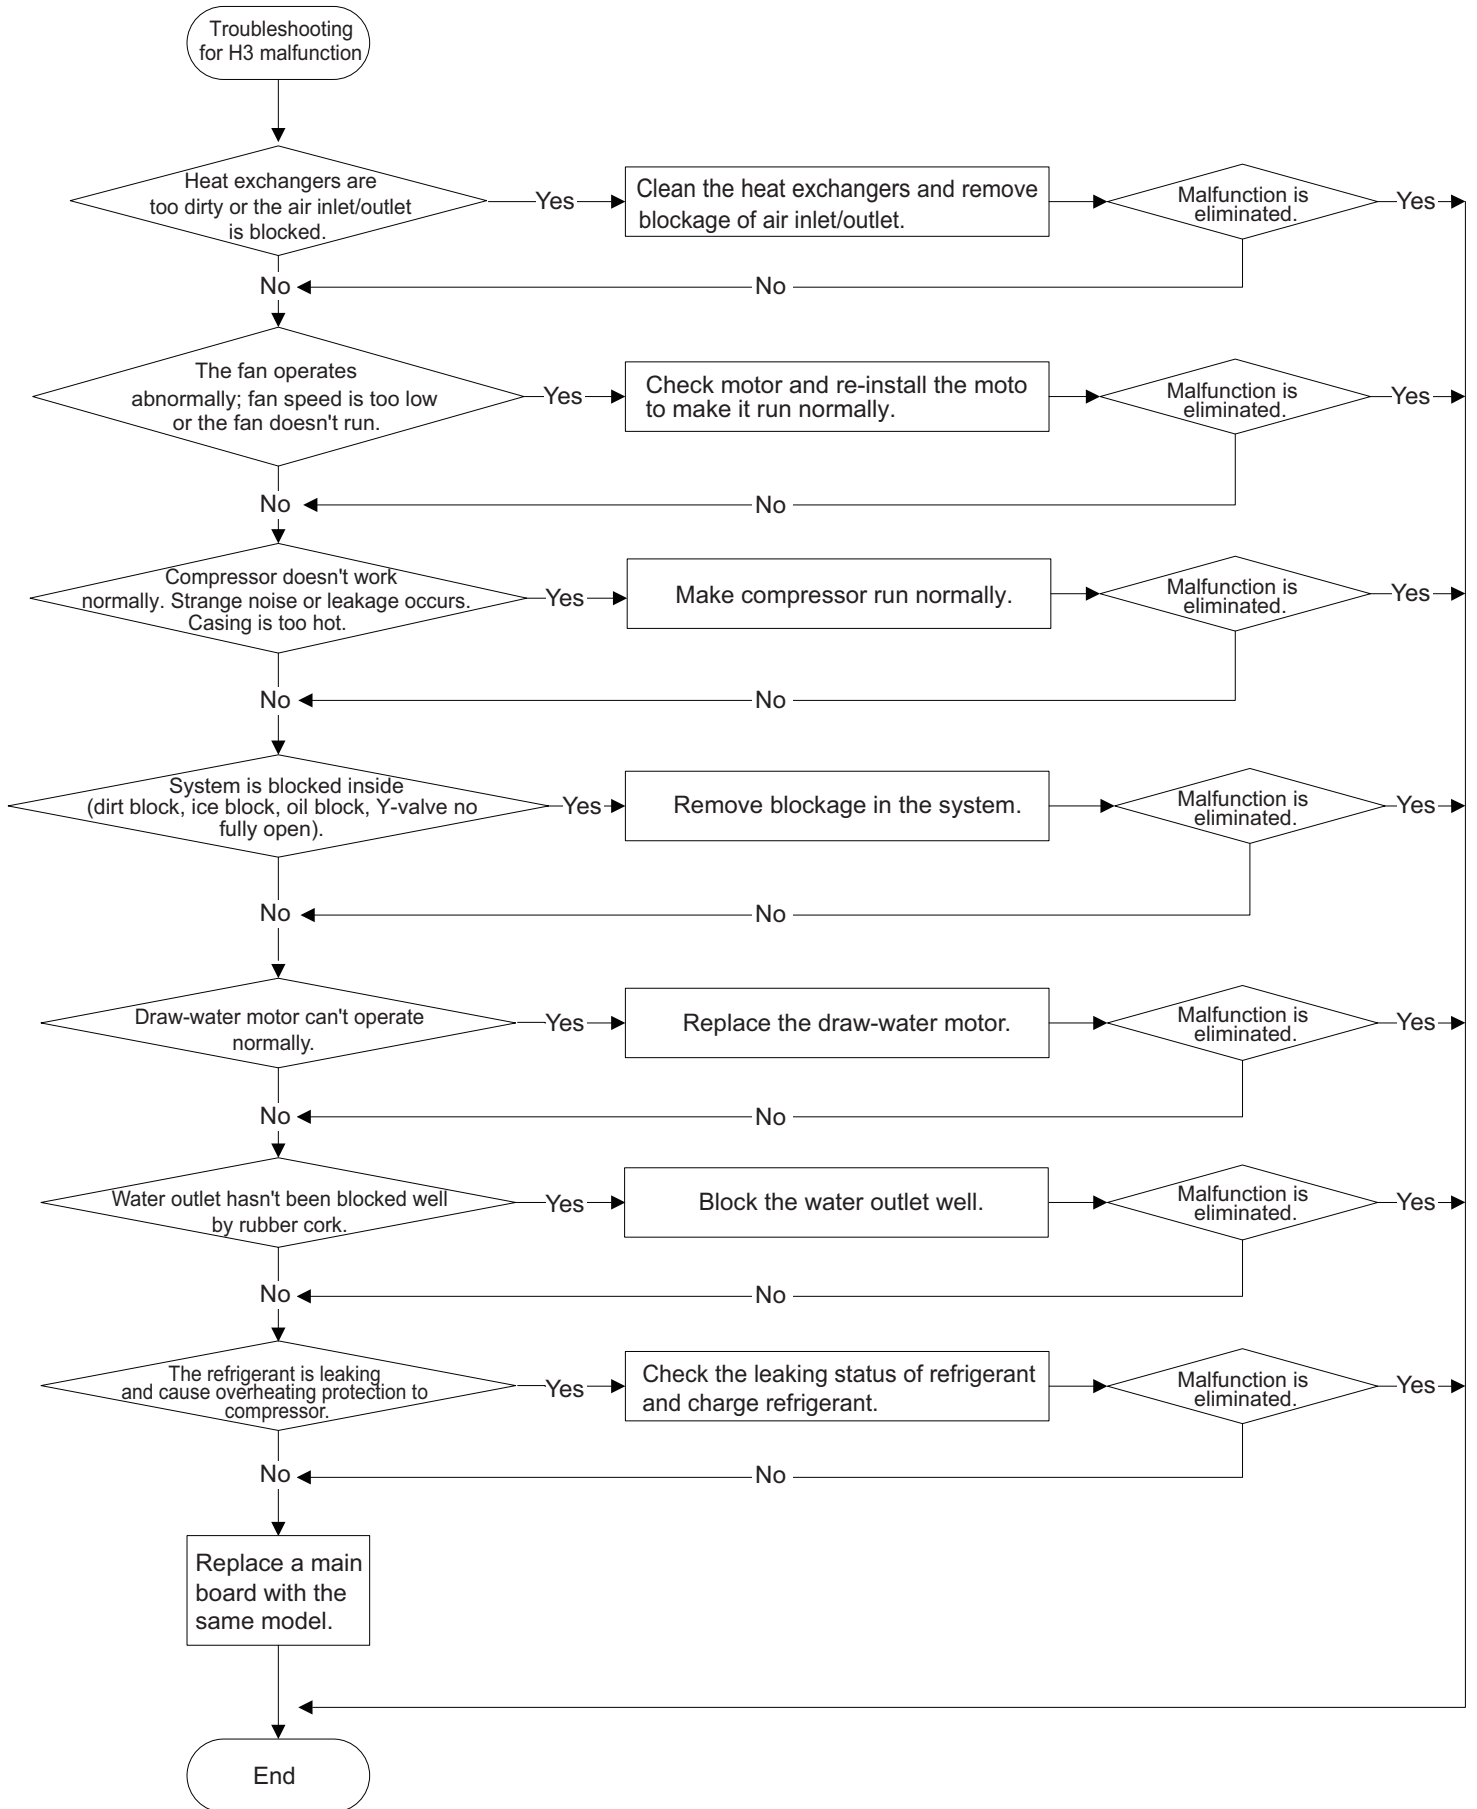

(4) Overload malfunction E8

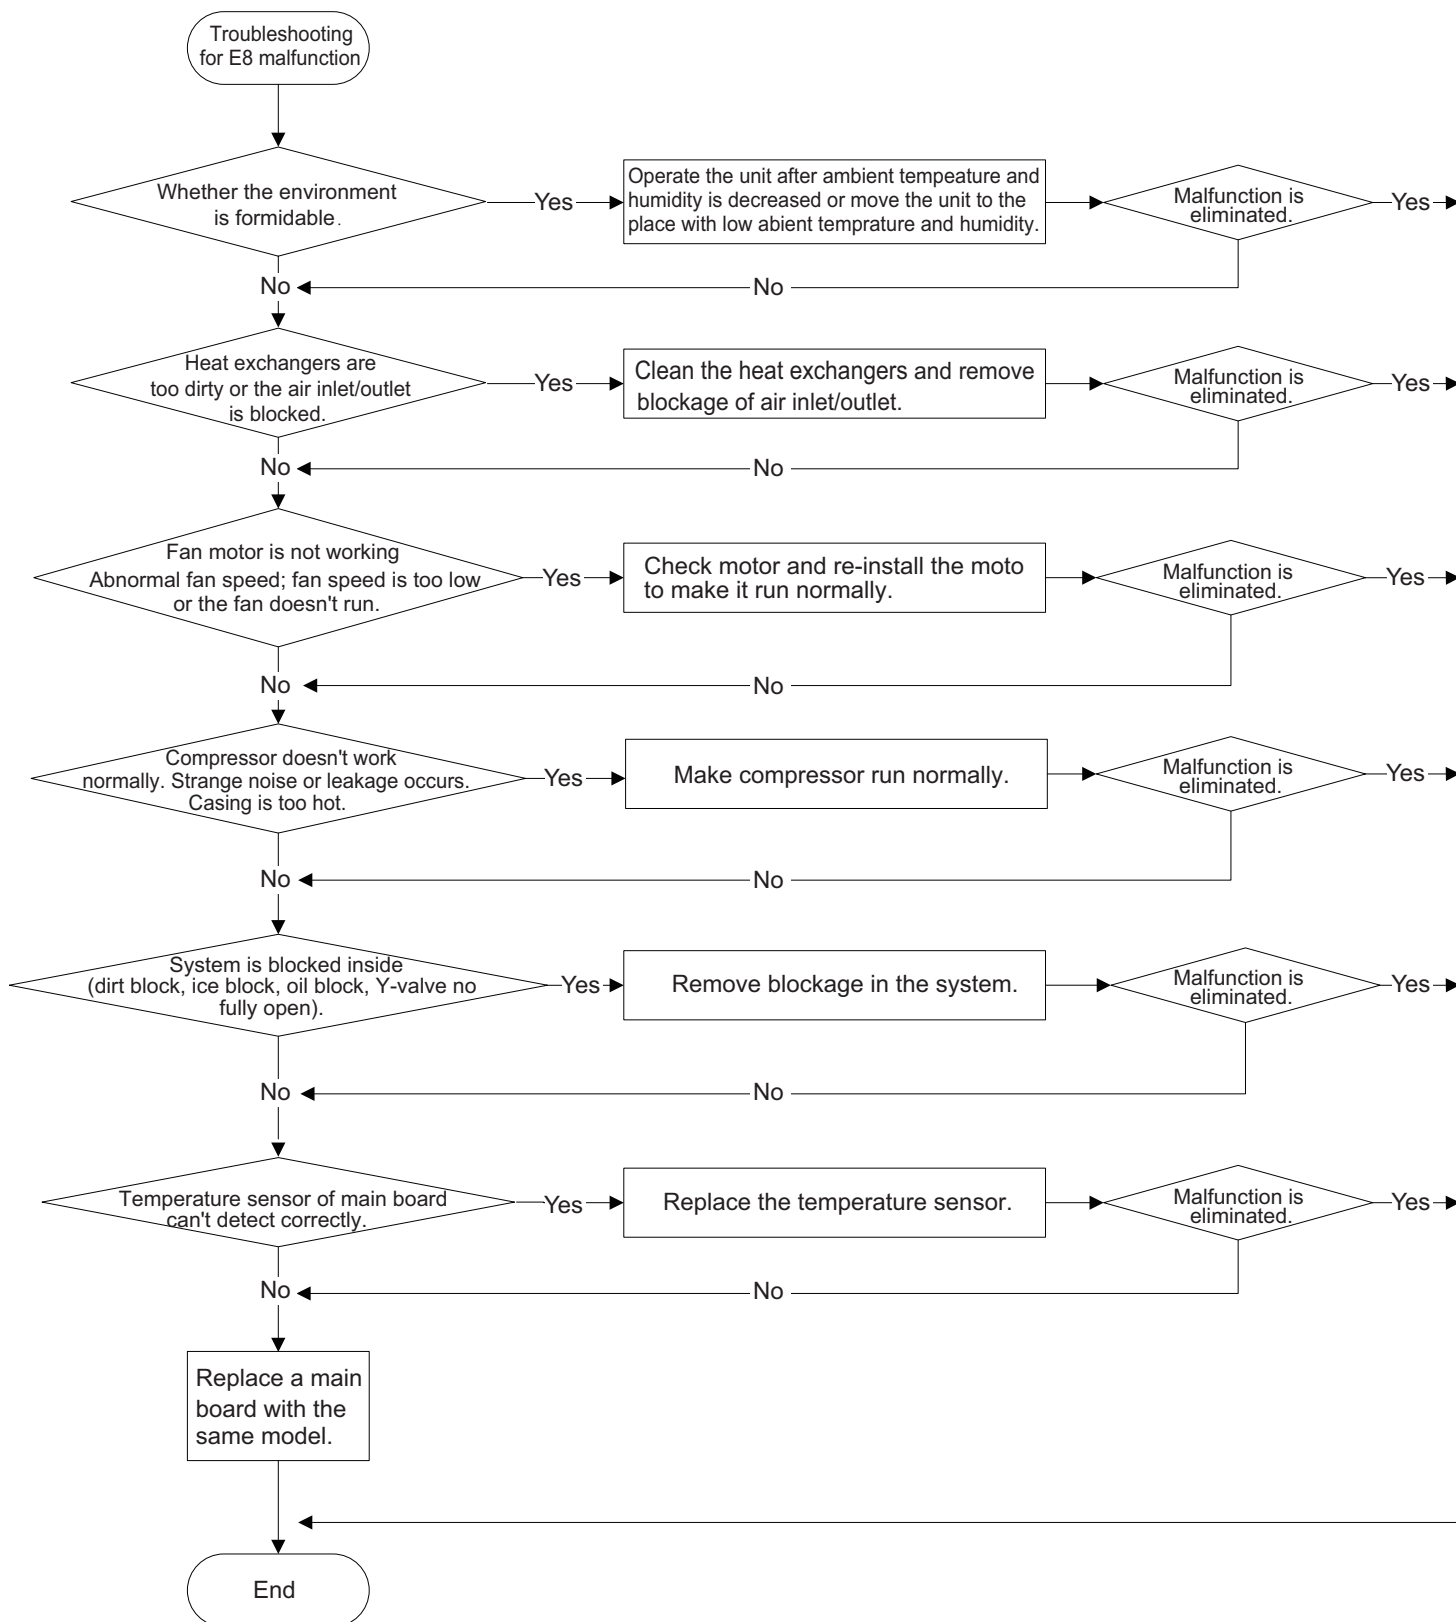

10.3 Maintenance Method for Common Malfunction

1. Air Conditioner Cant be Started Up

Possible Causes for Malfunction	Distinguish Method (A/C status)	Maintenance Method
No power supply; power plug hasnt been inserted tightly and poorly connected; wires hasnt been connected well.	Operation indicator is OFF and buzzer wont give out sound.	Check whether theres power supply; Check power plug and wire connection.
Ambient temperature sensor is damaged (no connection, loosen, wires are damaged, resistance value for temperature sensor is abnormal).	After energization, the unit will give out a sound, while it cant be started up after pressing ON/OFF button.	Check wire connection of temperature sensor or replace temperature sensor.
Electric leakage for air conditioner	After energization, room circuit breaker trips off at once.	Make sure the air conditioner is grounded reliably. Make sure wires of air conditioner is connected correctly. Check the wiring inside air conditioner. Check whether the insulation layer of power cord is damaged; if yes, place the power cord.
Model selection for air switch is improper	After energization, air switch trips off.	Select proper air switch.
Malfunction of remote controller	After energization, operation indicator is bright, while no display on remote controller or buttons have no action.	Replace batteries for remote controller. Repair or replace remote controller.
Water inside water chassis is full	Dual8 nixie tube displays H8 and buzzer gives out 8 sounds (water over-flow protection).	Discharge condensate water.
Malfunction of water-level switch		Check water-level switch and connection (refer to detection flow chart 3).

2. Poor Cooling (Heating) for Air Conditioner

Possible Causes	Discriminating Method (Air conditioner Status)	Troubleshooting
Set temperature is improper	Observe the set temperature on remote controller	Adjust the set temperature.
Fan speed is set too slow	Small fan blow at air outlet	Set the fan speed at high or medium.
Filter unit is blocked	Check the filter to see whether its blocked by sundries	Clean the filter.
Refrigerant is leaking	Discharged air temperature during cooling is higher than normal discharged wind temperature; Discharged air temperature during heating is lower than normal discharged wind temperature; Units pressure is much lower than regulated range	Please contact the after-sales service person.
Evaporator is frosted	Has set COOL (DRY) mode, but theres no cool fan	The system is defrosting. Resume operation after defrosting is finished.
Malfunction of capillary	Discharged air temperature during cooling is higher than normal discharged wind temperature; Discharged air temperature during heating is lower than normal discharged wind temperature; Unitt pressure is much lower than regulated range. If refrigerant isnt leaking, part of capillary is blocked	Replace the capillary.
Malfunction of fan	Fan cant operate	Refer to point 3 for detailed maintenance method.
Malfunction of compressor	Compressor cant operate	Refer to point 4 of maintenance method for details.

3. Fan Cant Swing

Possible Causes	Discriminating Method (Air conditioner Status)	Troubleshooting
Wrong wire connection, or poor connection	Check the wiring status according to circuit diagram	Connect wires according to wiring diagram to make sure all wiring terminals are connected firmly
Fan capacitor is damaged	Use universal meter to measure voltage at both ends of fan capacitor	Replace fan capacitor
Supply voltage is too low or too high	Use universal meter to measure the voltage	You are suggested to equip with voltage regulator
Motor is damaged	Above circumstances are normal, while the fan cant operate	Repair or replace motor

4. Compressor Cant Operate

Possible causes	Discriminating method (air conditioner status)	Troubleshooting
Wrong wire connection, or poor connection	Check the wiring status according to circuit diagram	Connect wires according to wiring diagram to make sure all wiring terminals are connected firmly
Capacity of compressor is damaged	Measure the capacity of fan capacitor with an universal meter and find that the capacity is out of the deviation range indicated on the nameplate of fan capacitor.	Replace the compressor capacitor
Power voltage is a little low or high	Use universal meter to measure the power supply voltage. The voltage is a little high or low	Suggest to equip with voltage regulator
Coil of compressor is burnt out	Use universal meter to measure the resistance between compressor terminals and its 0	Repair or replace compressor
Cylinder of compressor is blocked	Compressor cant operate	Repair or replace compressor

5. Unit hasnt stop operation afer bucket full or bucket full protection occurs frequently

Possible causes	Discriminating method (air conditioner status)	Troubleshooting
Water-level switch is open-circuited	The unit hasnt stop operation when water is full and theres water leakage	Check and repair the water-level switch
Draw water motor is damaged	Water over-flow protection occurs frequently and H8 is displayed	Replace draw water motor

6. Abnormal Sound and Vibration


Possible causes	Discriminating method (air conditioner status)	Troubleshooting
When turn on or turn off the unit, the panel and other parts will expand and theres abnormal sound	Theres the sound of "PAPA"	Normal phenomenon. Abnormal sound will disappear after a few minutes.
When turn on or turn off the unit, theres abnormal sound due to flow of refrigerant inside air conditioner	Water-running sound can be heard	Normal phenomenon. Abnormal sound will disappear after a few minutes.
Therere foreign objects inside air conditioner or parts are contacting with each other	Abnormal sound	Take out foreign objects. Adjust the position of parts. Stick damping plaster between contacting parts.
Abnormal shake of compressor	Outdoor unit gives out abnormal sound	Adjust the support foot mat of compressor, tighten the bolts.
Abnormal sound inside the compressor	Abnormal sound inside the compressor	If add too much refrigerant during maintenance, please reduce refrigerant properly. Replace compressor for other circumstances.

NO.	Description	Part Code			Qty
		GPC10AN-K5NNA1A	GPC12AN-K5NNA1A		
		Product Code	CK010032300	CK010032400	
1	Liquid Level Switch	4501008001	4501008001	4501008001	1
2	Supporter(LiquidLevelSwitch)	012060001586	012060001586	012060001586	1
3	fixed support (Compressor)	20011500074	20011500074	20011500074	1
4	Castor	24236009	24236009	24236009	4
5	Chassis Sub-assy	209020060010	209020060010	209020060010	1
6	Chassis Assy	209058060102	209058060102	209058060102	1
7	Drainage Plug for Base Plate	760015000001	760015000001	760015000001	1
8	Fan Motor	15010100013402	15010100013402	15010100013402	1
9	Splash Water Flywheel	10336003	10336003	10336003	1
10	Motor Sub-assy(Flutter)	000089060002	000089060002	000089060002	1
11	Supporting Board 1	01796035	01796035	01796035	2
12	Condenser Assy	011002060509	011002060464	011002060464	1
13	Air Duct Sub-assy 1	017107060018	017107060018	017107060018	1
14	Motor Holder (Lower)	200121060005	200121060005	200121060005	1
15	Centrifugal Fan	10316079	10316079	10316079	1
16	Detecting Plate	300018060062	300018060062	300018060062	1
17	Display Board	300001060305	300001060305	300001060305	1
18	Diversion Circle (lower)	200150060004	200150060004	200150060004	1
19	Fan Motor	150101000003	150101000003	150101000003	1
20	Wire Clamp	71010103	71010103	71010103	1
21	Clamp	7101600508	7101600508	7101600508	2
22	Rear Plate	200245060004	200245060004	200245060004	1
23	Water Retaining Box	200107000002	200107000002	200107000002	1
24	Cable Cross Plate	200147060002	200147060002	200147060002	1
25	Rear Grill	01476050	01476050	01476050	1
26	Rubber Plug	76001606000301	76001606000301	76001606000301	1
27	Cover of drainage hole	200170060001	200170060001	200170060001	1
28	Filter Sub-assy 2	111001060051	111001060051	111001060051	2
29	Motor Holder (Upper)	200121060004	200121060004	200121060004	1
30	Centifugal Fan	103003060009	103003060009	103003060009	1
31	Diversion Circle (Upper)	200150060005	200150060005	200150060005	1
32	Fan Motor	1501620809	1501620809	1501620809	1
33	Filter Sub-assy 1	111001060050	111001060050	111001060050	1
34	Axile Bush	10542704	10542704	10542704	1
35	Rear Grill	016001060018	016001060018	016001060018	1
36	SteppingMotor	1521210803	1521210803	1521210803	1
37	Crank 1	200023060003	200023060003	200023060003	1
38	Fixed support (sweep motor)	200115060009	200115060009	200115060009	1
39	Connecting Rod	200081060020	200081060020	200081060020	1
40	Cover of Volute	200223060002	200223060002	200223060002	1
41	Crank 2	200023060002	200023060002	200023060002	1
42	Air Duct Sub-assy 2	017107060019	017107060019	017107060019	1
43	Supporting Board 3	01207200097	01207200097	01207200097	2
44	Evaporator Assy	011001060506	011001060506	011001060506	1
45	Display Board	300001000269	300001000269	300001000269	1
46	Decorative Strip 1	230001060063	230001060063	23000106006301D	1
47	Guide Louver	200004060036	200004060036	200004060036	1
48	Membrane	600006060072	600006060072	600006060072	1
49	Decorative Strip 2	230001060064	230001060064	23000106006401D	1
50	Top Cover	200106060010	200106060010	200106060010	1
51	Top Cover Assy	000097060099	000097060099	000097060116	1
52	Electric Box Cover Sub-Assy	017053060019	017053060019	017053060019	1
53	Electric Box Cover	012020060124	012020060124	012020060124	1
54	Electric Box Cover1	200082060030	200082060030	200082060030	1

55	Tube sensor	390002073	390002073	390002073	1
56	Temperature Sensor	390000592	390000592	390000592	1
57	Temperature Sensor	390000456	390000456	390000456	1
58	Capacitor Clamp	02143401	02143401	02143401	1
59	Main Board	300002060432	300002060432	300002060432	1
60	Capacitor CBB65	33000081	3300008101	3300008101	1
61	Capacitor CBB61	3301074710	3301074710	3301074710	2
62	Pass Wire Ring Sub-assy	76614102	76614102	76614102	1
63	Electric Box	012017060183	012017060183	012017060183	1
64	Electric Box Sub-Assy	017007060387	017007060387	017007060387	1
65	Electric Box Assy	100002064087	100002064086	100002064086	1
66	Discharge Tube Sub-assy	030013060548	030013060547	030013060547	1
67	Front Panel	200003060065T	200003060065T	200003060065T	1
68	Capillary Sub-assy	030006060402	030006060281	030006060281	1
69	Inhalation Tube Sub-assy	030010060453	030010060453	030010060453	1
70	Covering Plate	01256026A	01256026A	01256026A	1
71	Compressor and Fittings	009001000174	009001060138	009001060138	1
72	Supporting Strip	01796007	01796007	01796007	1
73	Power Cord	4002046423	4002046423	4002046423	1
74	Remote Controller	305001000093	305001000093	305001000093	1
75	Tie-in 1	20010900023	20010900023	20010900023	1
76	Pipe	05236058	05236058	05236058	1
77	Rear Clip (upper)	26116132	26116132	26116132	1
78	Rear Clip (nether)	26116135	26116135	26116135	1
79	Mothproof Net	/	/	/	/
80	Baffle Plate	/	/	/	/
81	Back Plate1	/	/	/	/
82	Adjusting plate	/	/	/	/
83	Back Plate 2	/	/	/	/
84	Window Locking Bracket	/	/	/	/

Above data is subject to change without notice.

GPH12AN-K5NNA1A



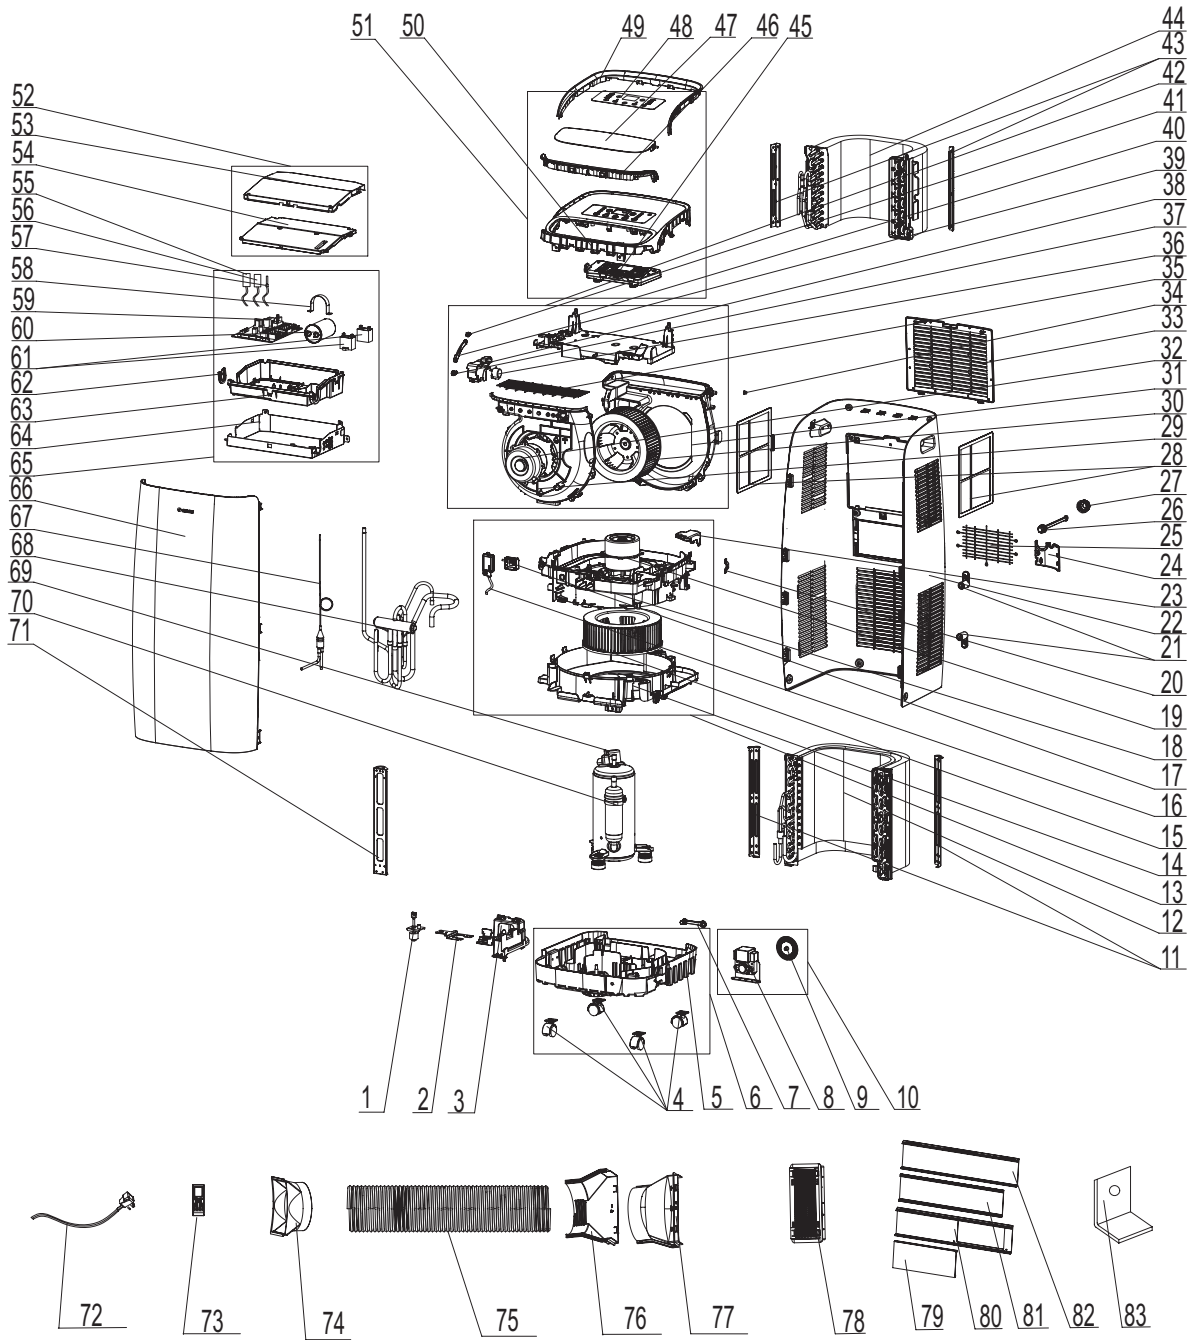





The component picture is only for reference please refer to the actual product.

NO.	Description	Part Code	Qty
		GPH12AN-K5NNA1A	
	Product Code	CK010031300	
1	Liquid Level Switch	4501008001	1
2	Supporter(LiquidLevelSwitch)	012060001586	1
3	fixed support (Compressor)	20011500074	1
4	Castor	24236009	4
5	Chassis Sub-assy	209020060010	1
6	Chassis Assy	209058060102	1
7	Drainage Plug for Base Plate	760015000001	1
8	Fan Motor	15010100013402	1
9	Splash Water Flywheel	10336003	1
10	Motor Sub-assy(Flutter)	000089060002	1
11	Supporting Board 1	01796035	2
12	Condenser Assy	011002060464	1
13	Air Duct Sub-assy 1	017107060018	1
14	Motor Holder (Lower)	200121060005	1
15	Centrifugal Fan	10316079	1
16	Detecting Plate	300018060062	1
17	Display Board	300001060305	1
18	Diversion Circle (lower)	200150060004	1
19	Fan Motor	150101000003	1
20	Wire Clamp	71010103	1
21	Clamp	7101600508	2
22	Rear Plate	200245060004	1
23	Water Retaining Box	200107000002	1
24	Cable Cross Plate	200147060002	1
25	Rear Grill	01476050	1
26	Rubber Plug	76001606000301	1
27	Cover of drainage hole	200170060001	1
28	Filter Sub-assy 2	111001060051	2
29	Motor Holder (Upper)	200121060004	1
30	Centifugal Fan	103003060009	1
31	Diversion Circle (Upper)	200150060005	1
32	Fan Motor	1501620809	1
33	Filter Sub-assy 1	111001060050	1
34	Axile Bush	10542704	1
35	Rear Grill	016001060018	1
36	SteppingMotor	1521210803	1
37	Crank 1	200023060003	1
38	Fixed support (sweep motor)	200115060009	1
39	Connecting Rod	200081060020	1
40	Cover of Volute	200223060002	1
41	Crank 2	200023060002	1
42	Air Duct Sub-assy 2	017107060019	1
43	Supporting Board 3	01207200097	2
44	Evaporator Assy	011001060525	1
45	Display Board	300001060304	1
46	Decorative Strip 1	230001060063	1
47	Guide Louver	200004060036	1
48	Membrane	600006060060	1
49	Decorative Strip 2	230001060064	1
50	Top Cover	200106060010	1
51	Top Cover Assy	000097060081	1
52	Electric Box Cover Sub-Assy	017053060019	1
53	Electric Box Cover	012020060124	1
54	Electric Box Cover1	200082060030	1




55	Tube sensor	390002073	1
56	Temperature Sensor	390000592	1
57	Temperature Sensor	390000456	1
58	Capacitor Clamp	02143401	1
59	Main Board	300002060006	1
60	Capacitor CBB65	3300008101	1
61	Capacitor CBB61	3301074710	2
62	Pass Wire Ring Sub-assy	76614102	1
63	Electric Box	012017060183	1
64	Electric Box Sub-Assy	017007060387	1
65	Electric Box Assy	100002063097	1
66	Front Panel	200003060065T	1
67	Capillary Sub-assy	030006060281	1
68	4-Way Valve Assy	030152060172	1
69	Covering Plate	01256026A	1
70	Compressor and Fittings	009001060138	1
71	Supporting Strip	01796007	1
72	Power Cord	4002046423	1
73	Remote Controller	305001000093	1
74	Tie-in 1	20010900023	1
75	Pipe	05236058	1
76	Rear Clip (upper)	26116132	1
77	Rear Clip (nether)	26116135	1
78	Mothproof Net	/	/
79	Baffle Plate	/	/
80	Back Plate1	/	/
81	Adjusting plate	/	/
82	Back Plate 2	/	/
83	Window Locking Bracket	/	/




Above data is subject to change without notice.

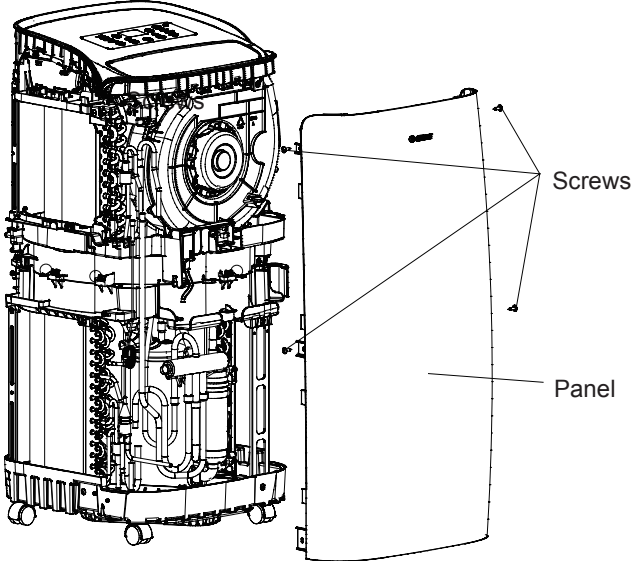
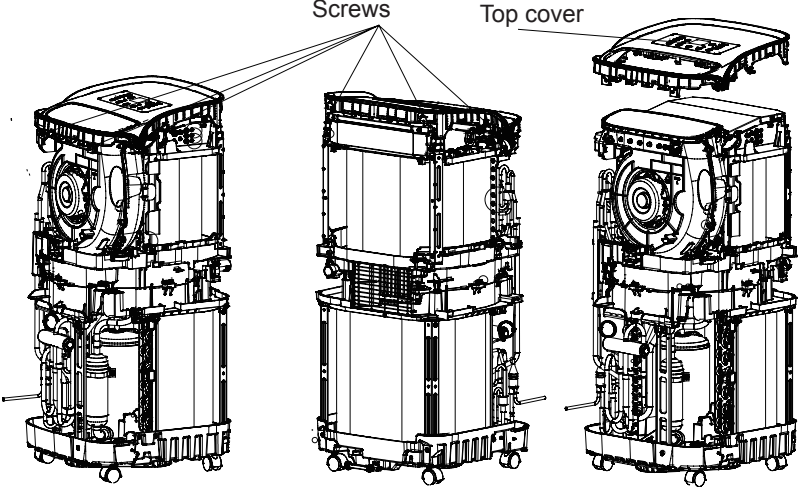
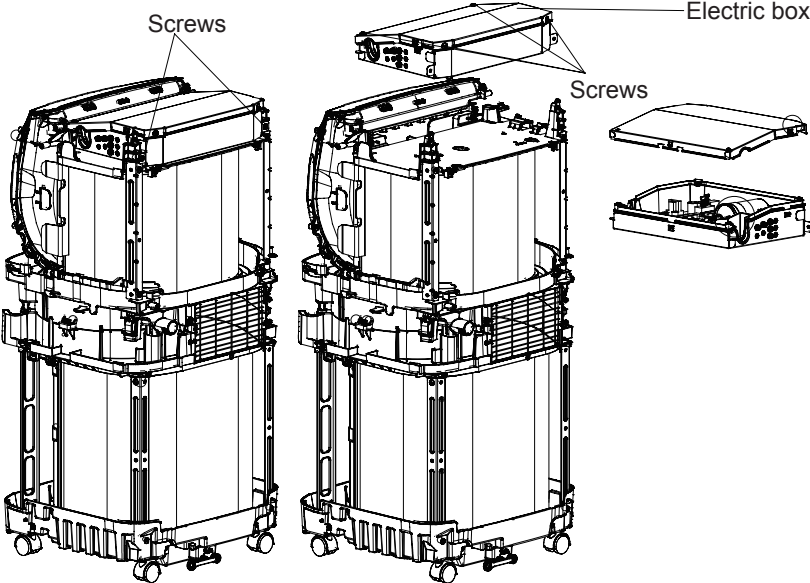
Step	Procedure
<p>4.Remove panel</p> <p>Remove 4 screws on the panel and then take out the panel.</p>	
<p>5.Remove top cover</p> <p>Remove 6 screws used for fixing the top cover and then take out the top cover.</p>	
<p>6.Remove electric box</p> <p>Remove 4 screws on the electric box and then open the electric box.</p>	

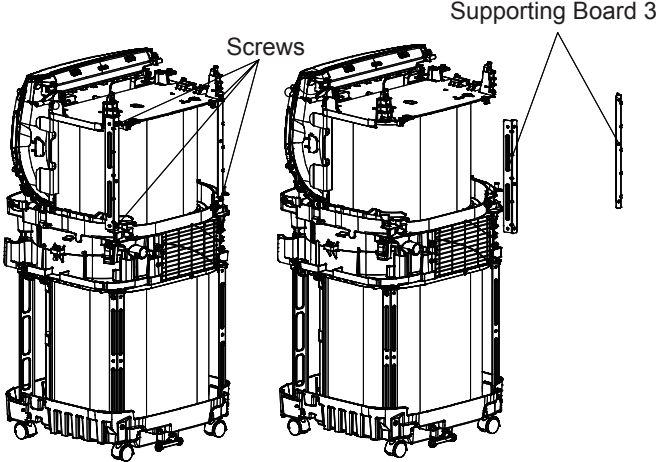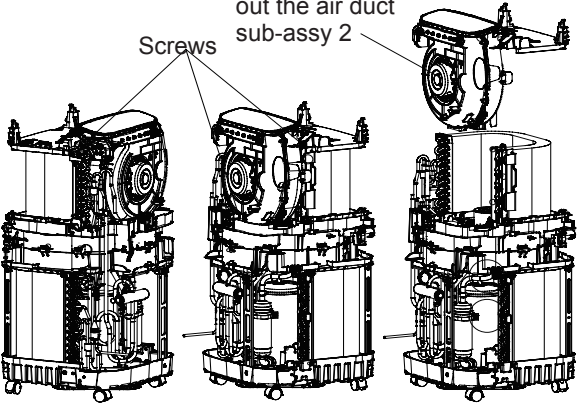
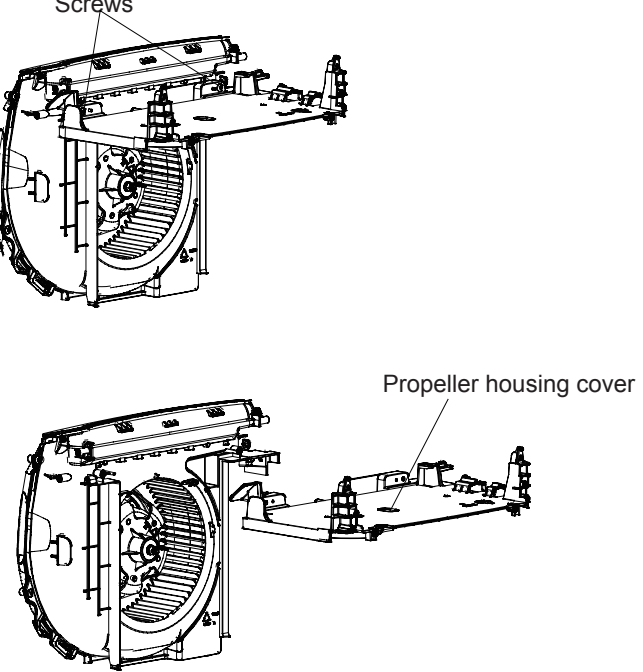
Step	Procedure
<p>7. Remove support board 3</p>	<p>Remove 4 screws used for fixing the support strip and then take out the support board 3.</p> 
<p>8. Remove out the air duct sub-assy 2</p>	<p>Remove 3 screws used for fixing the air duct sub-assy 2 and then take out the air duct sub-assy 2.</p> 
<p>9. Remove propeller housing cover</p>	<p>Remove 2 screws used for fixing the propeller housing cover and then take it out.</p> 




Step	Procedure	
<p>10.Remove fixed support</p>	<p>Take out the crankshaft 2 and connection rod at first and then remove one screw used for fixing the fixed mount (swing motor), and then take out the fixed mount.</p>	
<p>11.Remove swing motor</p>	<p>Remove 2 screws used for fixing the swing motor and then take it out.</p>	
<p>12.Remove guide loop (upper), case, swing blade, guide louver, crankshaft 1 and axle sleeve</p>	<p>Remove 3 screws used for fixing the guide loop(upper) and then the motor block, loose 3 clasps and then remove the guide loop (upper), case, swing blade, guide louver, crankshaft 1 and axle sleeve.</p>	

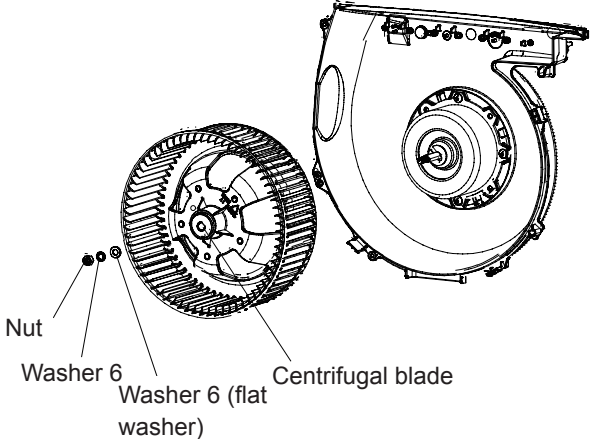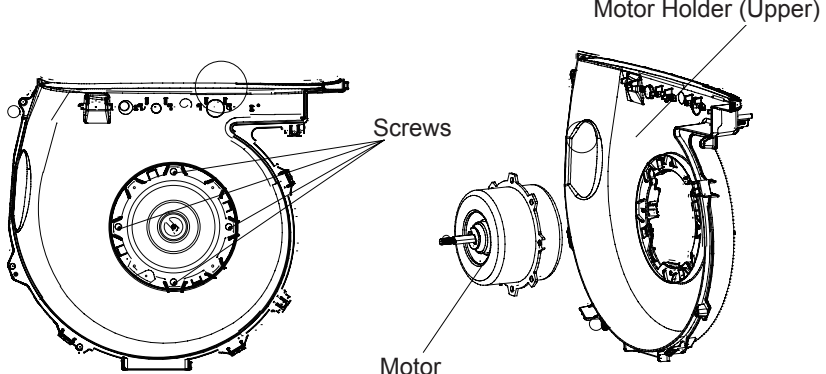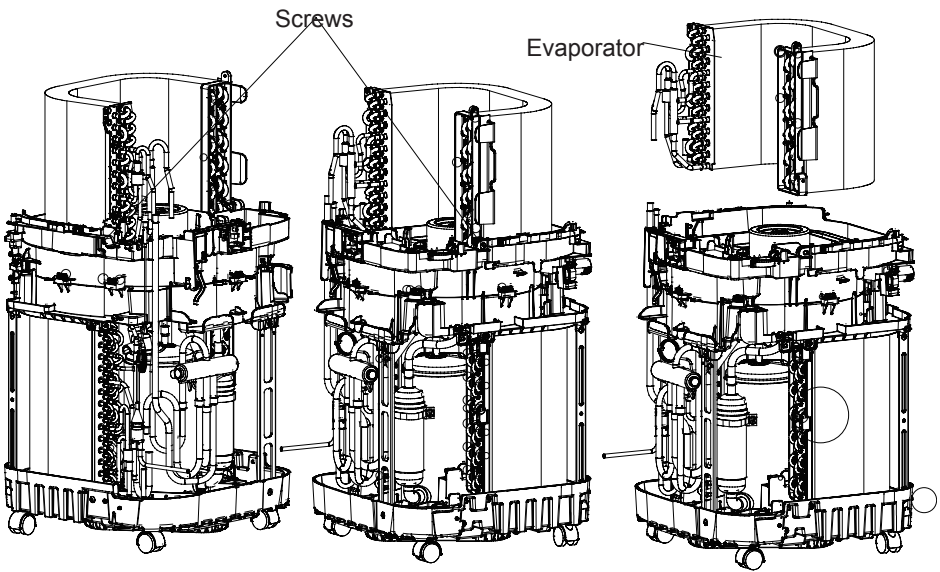Step	Procedure
<p>13.Remove centrifugal blade</p>	<p>Take out the nut, remove the washer 6 and washer 6 (flat washer) and then take out the centrifugal blade.</p> 
<p>14.Remove Motor</p>	<p>Remove 4 screws used for fixing the motor and then take out the motor.</p> 
<p>15. Remove evaporator</p>	<p>Remove 2 screws used for fixing the evaporator and then take out the evaporator.</p> 

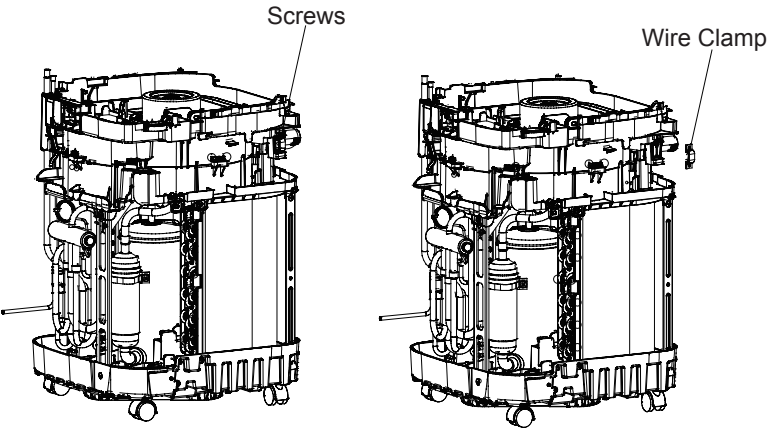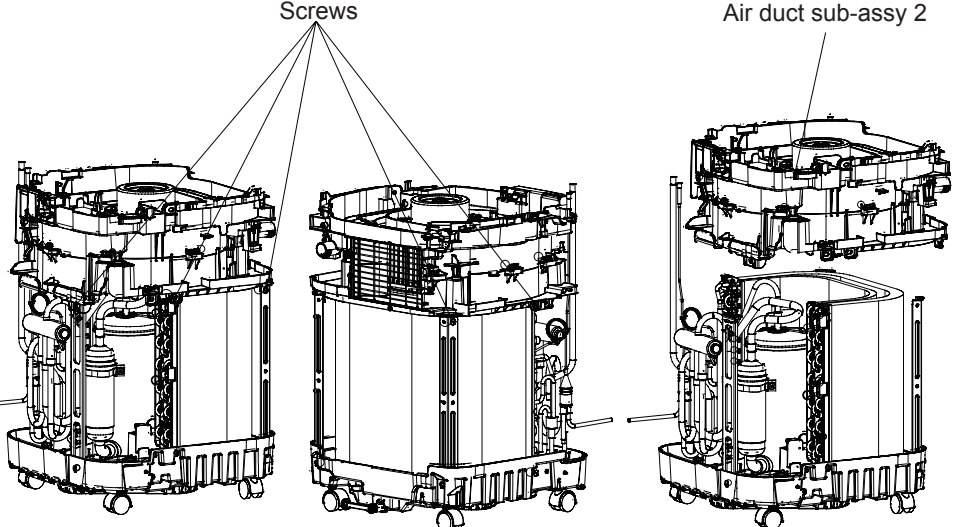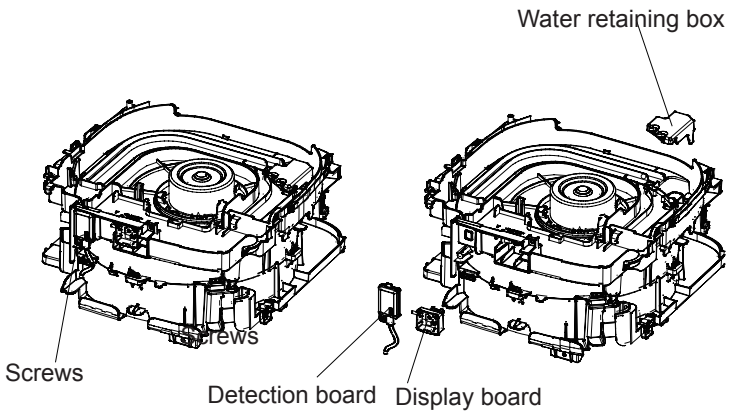Step	Procedure
<p>16. Remove Wire Clamp</p>	<p>Remove 1 screw on the wire-fixing clamp and then take out the wire-fixing clamp and then power cord.</p> 
<p>17. Remove Air duct sub-assy 2</p>	<p>Remove 5 screws used for fixing the air duct sub-assy and then take out the air duct sub-assy 2.</p> 
<p>18. Remove Detection Board</p>	<p>Remove the water retaining box and the display board, and then remove the screws used for fixing the detection board, and then remove the detection board.</p> 

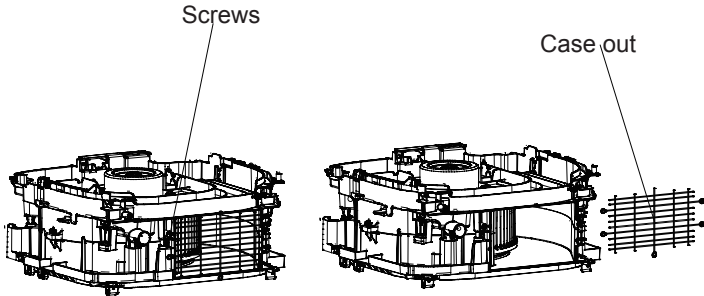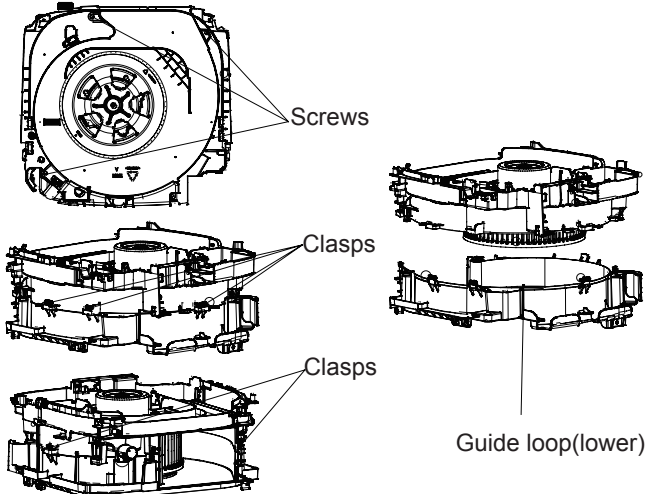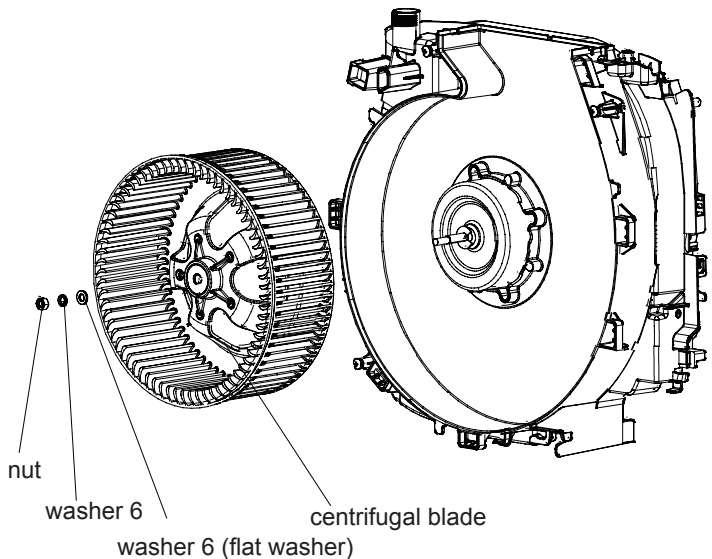Step	Procedure
<p>19. Remove case out</p>	<p>Remove one screw used for fixing the case and then take the case out.</p> 
<p>20 Remove loop(lower)</p>	<p>Remove 3 screws on the guide loop (lower), loose 6 clasps and then take out the guide loop(lower).</p> 
<p>21. Remove centrifugal blade</p>	<p>Take out the nut, remove washer 6 and washer 6 (flat washer), and then remove the centrifugal blade.</p> 

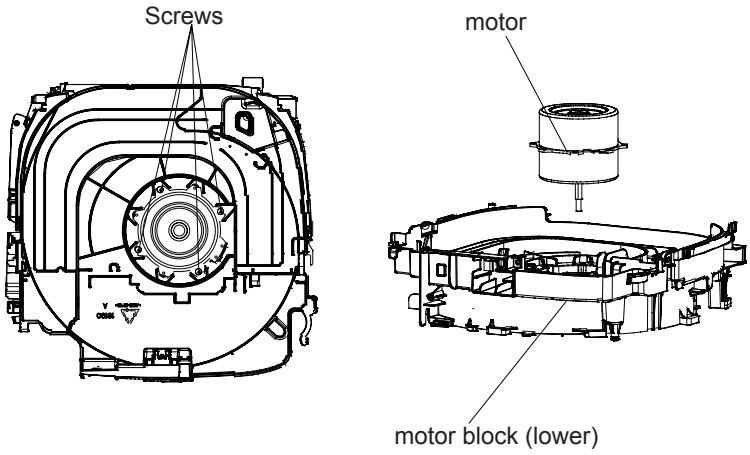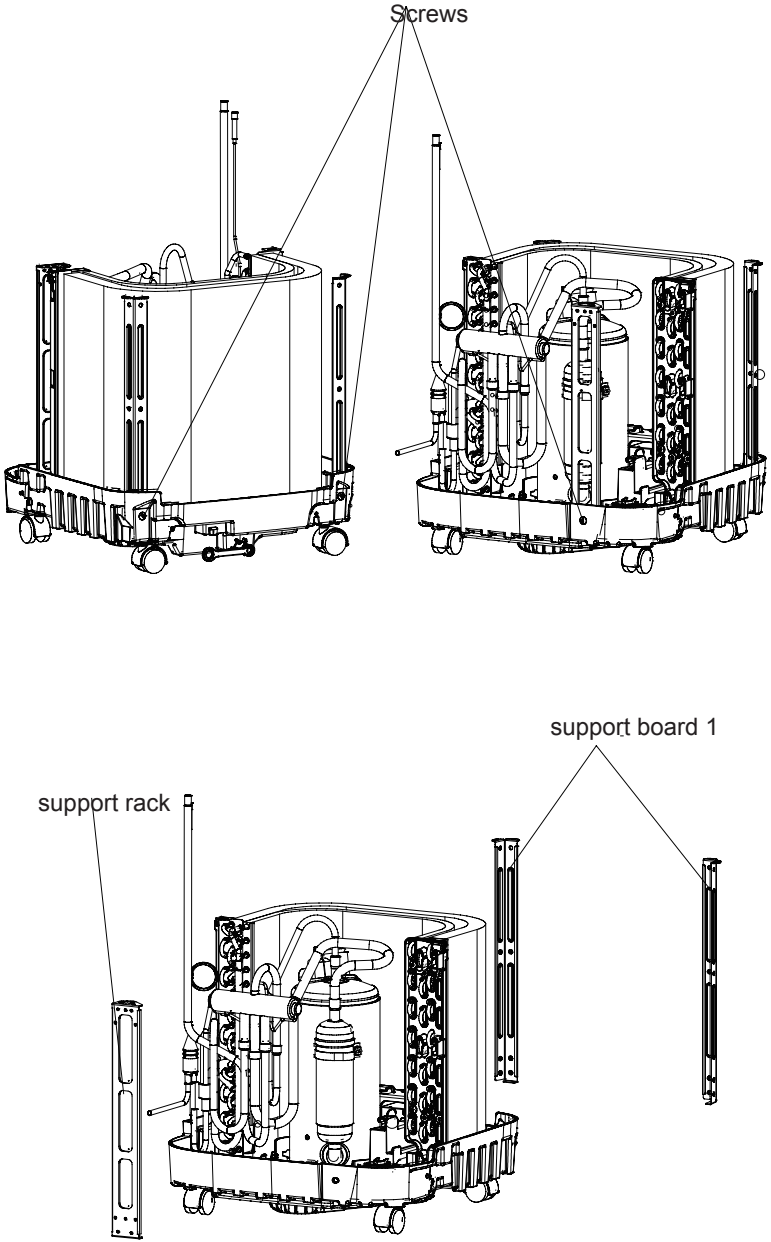Step	Procedure
<p>22. Remove motor block (lower)</p> <p>Remove 4 screws used for fixing the motor and then take out the motor from the motor block (lower).</p>	
<p>23. Remove support board 1</p> <p>Remove 3 screws used for fixing the support rack and support board 1 and then take out the support rack and support board 1.</p>	

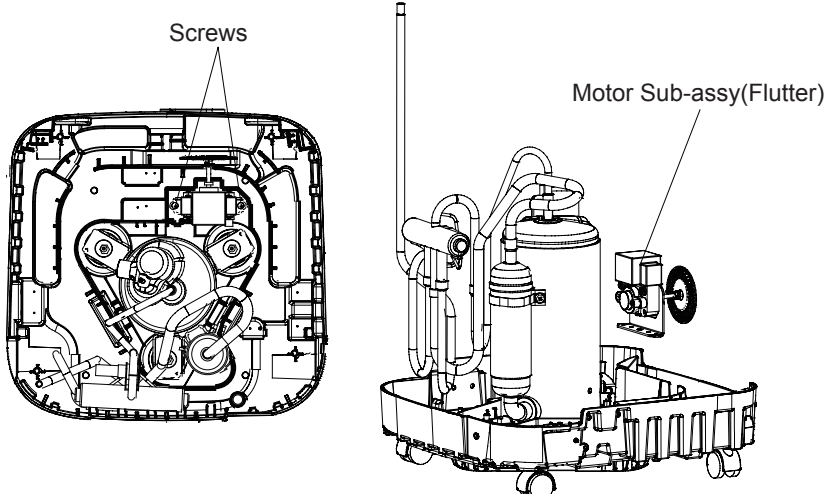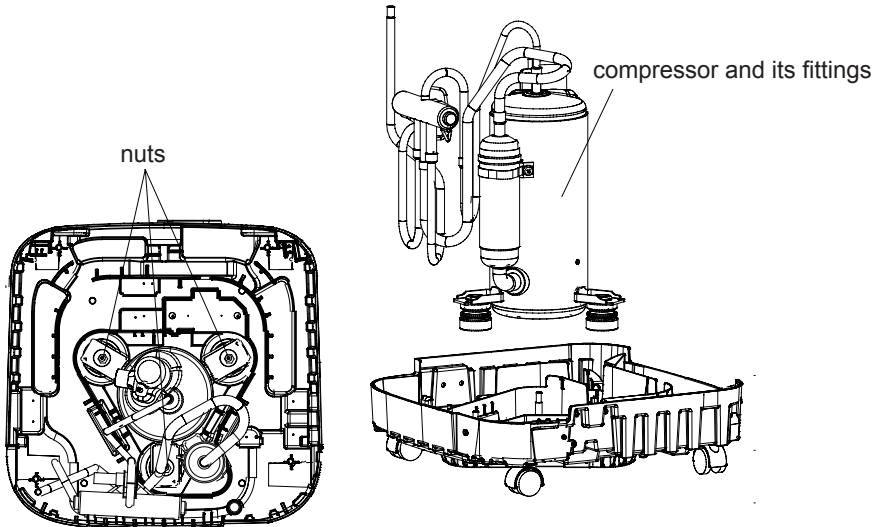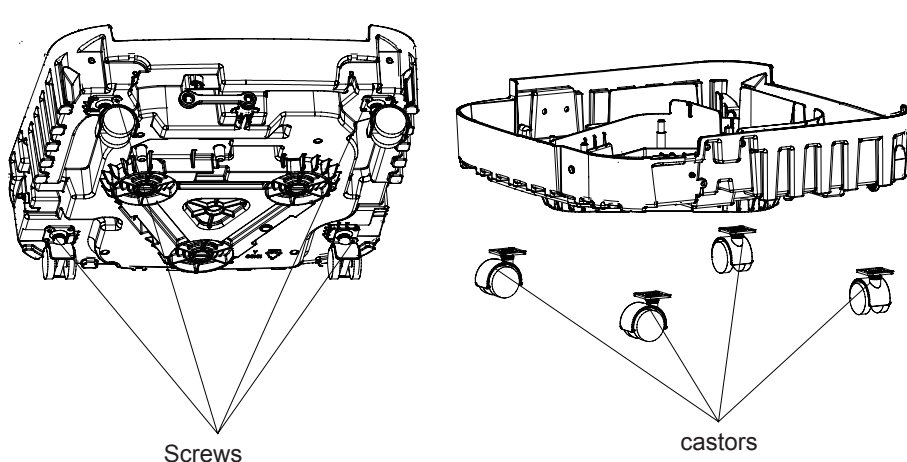Step	Procedure	
<p>27.Remove Motor Sub-assy(Flutter)</p>	<p>Remove 2 screws on the motor sub-assy and then remove the Motor Sub-assy(Flutter).</p>	
<p>28. Remove compressor and its fittings</p>	<p>Remove 3 nuts with washer on the compressor and its fittings and then remove the compressor and its fittings.</p>	
<p>29.Remove castors</p>	<p>Remove 4 screws used for fixing the castors and then take out the castors.</p>	


Appendix 2: List of Resistance for Temperature Sensor

Resistance table of temperature sensor (15K)

Temp(°C)	Resistance(kΩ)	Temp(°C)	Resistance(kΩ)	Temp(°C)	Resistance(kΩ)	Temp(°C)	Resistance(kΩ)
-19	138.1	20	18.75	59	3.848	98	1.071
-18	128.6	21	17.93	60	3.711	99	1.039
-17	121.6	22	17.14	61	3.579	100	1.009
-16	115	23	16.39	62	3.454	101	0.98
-15	108.7	24	15.68	63	3.333	102	0.952
-14	102.9	25	15	64	3.217	103	0.925
-13	97.4	26	14.36	65	3.105	104	0.898
-12	92.22	27	13.74	66	2.998	105	0.873
-11	87.35	28	13.16	67	2.896	106	0.848
-10	82.75	29	12.6	68	2.797	107	0.825
-9	78.43	30	12.07	69	2.702	108	0.802
-8	74.35	31	11.57	70	2.611	109	0.779
-7	70.5	32	11.09	71	2.523	110	0.758
-6	66.88	33	10.63	72	2.439	111	0.737
-5	63.46	34	10.2	73	2.358	112	0.717
-4	60.23	35	9.779	74	2.28	113	0.697
-3	57.18	36	9.382	75	2.206	114	0.678
-2	54.31	37	9.003	76	2.133	115	0.66
-1	51.59	38	8.642	77	2.064	116	0.642
0	49.02	39	8.297	78	1.997	117	0.625
1	46.6	40	7.967	79	1.933	118	0.608
2	44.31	41	7.653	80	1.871	119	0.592
3	42.14	42	7.352	81	1.811	120	0.577
4	40.09	43	7.065	82	1.754	121	0.561
5	38.15	44	6.791	83	1.699	122	0.547
6	36.32	45	6.529	84	1.645	123	0.532
7	34.58	46	6.278	85	1.594	124	0.519
8	32.94	47	6.038	86	1.544	125	0.505
9	31.38	48	5.809	87	1.497	126	0.492
10	29.9	49	5.589	88	1.451	127	0.48
11	28.51	50	5.379	89	1.408	128	0.467
12	27.18	51	5.197	90	1.363	129	0.456
13	25.92	52	4.986	91	1.322	130	0.444
14	24.73	53	4.802	92	1.282	131	0.433
15	23.6	54	4.625	93	1.244	132	0.422
16	22.53	55	4.456	94	1.207	133	0.412
17	21.51	56	4.294	95	1.171	134	0.401
18	20.54	57	4.139	96	1.136	135	0.391
19	19.63	58	3.99	97	1.103	136	0.382

Resistance table of temperature sensor (50K)

Temp(°C)	Resistance(kΩ)	Temp(°C)	Resistance(kΩ)	Temp(°C)	Resistance(kΩ)	Temp(°C)	Resistance(kΩ)
-29	853.5	10	98	49	18.34	88	4.75
-28	799.8	11	93.42	50	17.65	89	4.61
-27	750	12	89.07	51	16.99	90	4.47
-26	703.8	13	84.95	52	16.36	91	4.33
-25	660.8	14	81.05	53	15.75	92	4.20
-24	620.8	15	77.35	54	15.17	93	4.08
-23	580.6	16	73.83	55	14.62	94	3.96
-22	548.9	17	70.5	56	14.09	95	3.84
-21	516.6	18	67.34	57	13.58	96	3.73
-20	486.5	19	64.33	58	13.09	97	3.62
-19	458.3	20	61.48	59	12.62	98	3.51
-18	432	21	58.77	60	12.17	99	3.41
-17	407.4	22	56.19	61	11.74	100	3.32
-16	384.5	23	53.74	62	11.32	101	3.22
-15	362.9	24	51.41	63	10.93	102	3.13
-14	342.8	25	49.19	64	10.54	103	3.04
-13	323.9	26	47.08	65	10.18	104	2.96
-12	306.2	27	45.07	66	9.83	105	2.87
-11	289.6	28	43.16	67	9.49	106	2.79
-10	274	29	41.34	68	9.17	107	2.72
-9	259.3	30	39.61	69	8.85	108	2.64
-8	245.6	31	37.96	70	8.56	109	2.57
-7	232.6	32	36.38	71	8.27	110	2.50
-6	220.5	33	34.88	72	7.99	111	2.43
-5	209	34	33.45	73	7.73	112	2.37
-4	198.3	35	32.09	74	7.47	113	2.30
-3	199.1	36	30.79	75	7.22	114	2.24
-2	178.5	37	29.54	76	7.00	115	2.18
-1	169.5	38	28.36	77	6.76	116	2.12
0	161	39	27.23	78	6.54	117	2.07
1	153	40	26.15	79	6.33	118	2.02
2	145.4	41	25.11	80	6.13	119	1.96
3	138.3	42	24.13	81	5.93	120	1.91
4	131.5	43	23.19	82	5.75	121	1.86
5	125.1	44	22.29	83	5.57	122	1.82
6	119.1	45	21.43	84	5.39	123	1.77
7	113.4	46	20.6	85	5.22	124	1.73
8	108	47	19.81	86	5.06	125	1.68
9	102.8	48	19.06	87	4.90	126	1.64



JF00303899



GREE ELECTRIC APPLIANCES, INC. OF ZHUHAI

Add: West Jinji Rd, Qianshan, Zhuhai,Guangdong, China, 519070

Tel: (+86-756) 8522218

Fax: (+86-756) 8669426

E-mail: gree@gree.com.cn www.gree.com

HONG KONG GREE ELECTRIC APPLIANCES SALES LIMITED

Add: Unit 2612,26/F.,Miramar Tower 132 Nathan Road,TST,Kowloon,HK

Tel: (852) 31658898 Fax: (852) 31651029

For product improvement, specifications and appearance in this manual are subject to change without prior notice.